IEI Technology Corp.

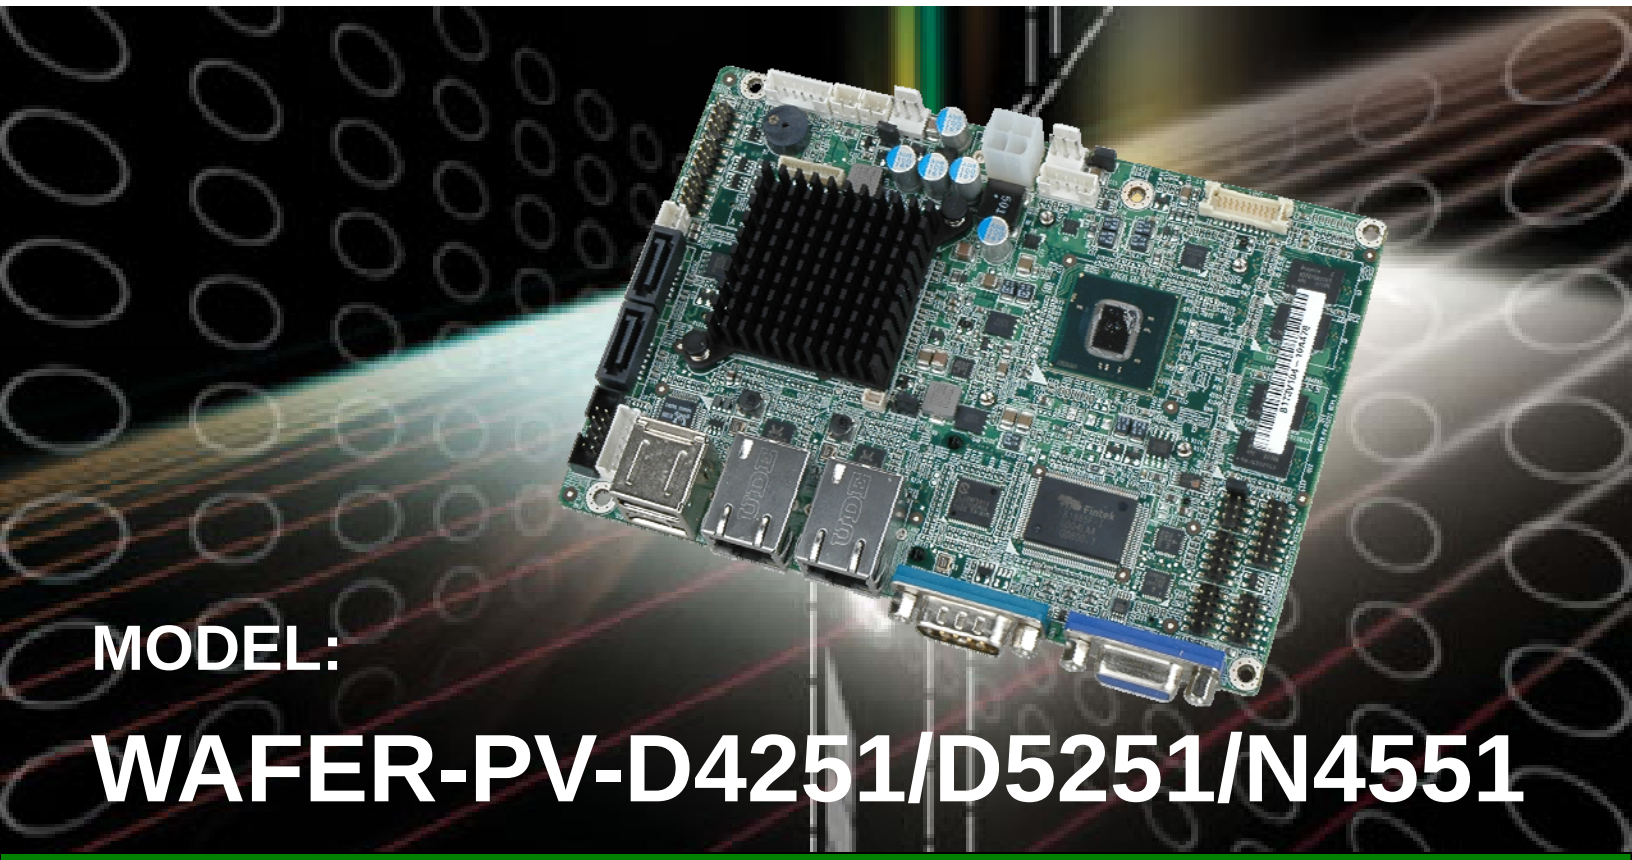

MODEL:

WAFER-PV-D4251/D5251/N4551

3.5" SBC with Intel® Atom™ Processor
1 GB DDR3 Memory On Board, Up to 2.0 GB DDR3
VGA, LVDS, PCIe Mini, RS-232/422/485, SATA 3Gb/s
CompactFlash®, Eight USB, RoHS

User Manual

Rev. 1.00 – 10 January, 2011

RoHS Lead Free

Revision

Date	Version	Changes
10 January, 2011	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Table of Contents

1 INTRODUCTION 1

1.1 INTRODUCTION 2
1.2 BENEFITS 2
1.3 FEATURES 3
1.4 CONNECTORS 3
1.5 DIMENSIONS 4
1.6 DATA FLOW 5
1.7 TECHNICAL SPECIFICATIONS 5

2 PACKING LIST 8

2.1 ANTI-STATIC PRECAUTIONS 9
2.2 UNPACKING PRECAUTIONS 9
2.3 PACKING LIST 10
2.4 OPTIONAL ITEMS 11

3 CONNECTOR PINOUTS 12

3.1 PERIPHERAL INTERFACE CONNECTORS 13
3.1.1 Layout 13
3.1.2 Peripheral Interface Connectors 13
3.1.3 External Interface Panel Connectors 14
3.2 INTERNAL PERIPHERAL CONNECTORS 15
3.2.1 Audio Connector 15
3.2.2 CompactFlash® Slot 15
3.2.3 Digital I/O Connector 17
3.2.4 Fan Connectors 18
3.2.5 Keyboard/Mouse Connector 18
3.2.6 LVDS Connector 19
3.2.7 LVDS Backlight Connector 20
3.2.8 PCIe Mini Card Slot 21
3.2.9 Power Button Connector 22
3.2.10 Reset Button Connector 23

3.2.11 Power Output and HDD LED Connector *24*
3.2.12 Power Source Connector *24*
3.2.13 Serial Port Connector (COM2) *25*
3.2.14 RS-232 Serial Port Connector (COM3, COM4) *26*
3.2.15 SATA Drive Connectors *27*
3.2.16 SATA Power Connectors *28*
3.2.17 USB Connectors *28*
3.3 EXTERNAL INTERFACE CONNECTORS 29
3.3.1 Ethernet Connectors *30*
3.3.2 Serial Port Connector *31*
3.3.3 USB Ports *31*
3.3.4 VGA Connector *32*

4 INSTALLATION 34

4.1 ANTI-STATIC PRECAUTIONS 35
4.2 INSTALLATION CONSIDERATIONS 36
4.3 COMPACTFLASH® INSTALLATION 37
4.4 JUMPER SETTINGS 38
4.4.1 LVDS1 Voltage Selection Jumper *39*
4.4.2 Clear CMOS Jumper *40*
4.4.3 COM2 Port Mode Setting Jumper *41*
4.4.4 AT/ATX Power Mode Setting Jumper *41*
4.5 CHASSIS INSTALLATION 42
4.5.1 Airflow *42*
4.5.2 Motherboard Installation *42*
4.6 INTERNAL PERIPHERAL DEVICE CONNECTIONS 42
4.6.1 AT Power Connection *43*
4.6.2 Audio Kit Installation *44*
4.6.3 Keyboard/Mouse Connector *46*
4.7 EXTERNAL PERIPHERAL INTERFACE CONNECTION 48
4.7.1 LAN Connection (Single Connector) *48*
4.7.2 Serial Device Connection *49*
4.7.3 USB Connection (Dual Connector) *49*
4.7.4 VGA Monitor Connection *50*
4.8 SOFTWARE INSTALLATION 51

5 BIOS 54

5.1 INTRODUCTION 55
5.1.1 Starting Setup 55
5.1.2 Using Setup 55
5.1.3 Getting Help 56
5.1.4 Unable to Reboot After Configuration Changes 56
5.1.5 BIOS Menu Bar 56
5.2 MAIN 57
5.3 ADVANCED 58
5.3.1 ACPI Configuration 58
5.3.2 CPU Configuration 60
5.3.3 IDE Configuration 61
5.3.4 USB Configuration 62
5.3.5 Super IO Configuration 64
5.3.5.1 Serial Port n Configuration 64
5.3.6 H/W Monitor 68
5.3.7 Serial Port Console Redirection 69
5.4 CHIPSET 70
5.4.1 Host Bridge 71
5.4.2 South Bridge 72
5.4.3 Intel IGD SWSCI OpRegion 73
5.5 BOOT 75
5.6 SECURITY 77
5.7 EXIT 77

A BIOS OPTIONS 79

B ONE KEY RECOVERY 82

B.1 ONE KEY RECOVERY INTRODUCTION 83
B.1.1 System Requirement 84
B.1.2 Supported Operating System 85
B.2 SETUP PROCEDURE FOR WINDOWS 86
B.2.1 Hardware and BIOS Setup 86
B.2.2 Create Partitions 87
B.2.3 Install Operating System, Drivers and Applications 90

B.2.4 Build-up Recovery Partition *91*
B.2.5 Create Factory Default Image *93*
B.3 SETUP PROCEDURE FOR LINUX 98
B.4 RECOVERY TOOL FUNCTIONS 101
B.4.1 Factory Restore *103*
B.4.2 Backup System *104*
B.4.3 Restore Your Last Backup *105*
B.4.4 Manual *106*
B.5 OTHER INFORMATION 107
B.5.1 Using AHCI Mode or ALi M5283 / VIA VT6421A Controller *107*
B.5.2 System Memory Requirement *109*

C TERMINOLOGY 110

D HAZARDOUS MATERIALS DISCLOSURE 114

D.1 HAZARDOUS MATERIALS DISCLOSURE TABLE FOR IPB PRODUCTS CERTIFIED AS ROHS COMPLIANT UNDER 2002/95/EC WITHOUT MERCURY 115

List of Figures

Figure 1-1: WAFER-PV-D4251/D5251/N4551 2
Figure 1-2: Connectors 3
Figure 1-3: Dimensions without Heatsink (mm) 4
Figure 1-4: Data Flow Diagram 5
Figure 3-1: Connector and Jumper Locations 13
Figure 3-2: Audio Connector Location 15
Figure 3-3: CompactFlash® Slot Location 16
Figure 3-4: Digital I/O Connector Location 17
Figure 3-5: Fan Connector Locations 18
Figure 3-6: Keyboard/Mouse Connector Location 19
Figure 3-7: LVDS Connector Location 20
Figure 3-8: Backlight Inverter Connector 21
Figure 3-9: PCIe Mini Card Slot Location 21
Figure 3-10: Power Button Connector Location 23
Figure 3-11: Reset Button Connector Location 23
Figure 3-12: LED and +5 V Power Output Connector Location 24
Figure 3-13: LED and +5 V Power Output Connector Location 25
Figure 3-14: RS-232/422/485 Serial Port Connector Location 26
Figure 3-15: RS-232 Serial Port Connector Location 26
Figure 3-16: SATA Drive Connector Location 27
Figure 3-17: SATA Power Connector Locations 28
Figure 3-18: USB Connector Location 29
Figure 3-19: External Interface Connectors 29
Figure 3-20: Ethernet Connector 30
Figure 3-21: Serial Port Pinout Locations 31
Figure 3-22: VGA Connector 33
Figure 4-1: CompactFlash® Card Installation 38
Figure 4-2: LVDS1 Voltage Selection Jumper Location 39
Figure 4-3: Clear CMOS Jumper Location 40
Figure 4-4: COM2 Port Mode Setting Jumper Location 41

Figure 4-5: AT/ATX Power Mode Setting Jumper Location 42
Figure 4-6: Power Cable to Motherboard Connection 44
Figure 4-7: Audio Kit Cable Connection....45
Figure 4-8: Connect Power Cable to Power Supply....46
Figure 4-9: Keyboard/mouse Y-cable Connection 47
Figure 4-10: LAN Connection 48
Figure 4-11: Serial Device Connector....49
Figure 4-12: USB Connector....50
Figure 4-13: VGA Connector 51
Figure 4-14: Introduction Screen 52
Figure 4-15: Available Drivers 53
Figure B-1: IEI One Key Recovery Tool Menu 83
Figure B-2: Launching the Recovery Tool 87
Figure B-3: Recovery Tool Setup Menu 88
Figure B-4: Command Mode....88
Figure B-5: Partition Creation Commands....89
Figure B-6: Launching the Recovery Tool 91
Figure B-7: System Configuration for Windows 91
Figure B-8: Build-up Recovery Partition 92
Figure B-9: Press any key to continue 92
Figure B-10: Press F3 to Boot into Recovery Mode....93
Figure B-11: Recovery Tool Menu 93
Figure B-12: About Symantec Ghost Window....94
Figure B-13: Symantec Ghost Path 94
Figure B-14: Select a Local Source Drive 95
Figure B-15: Select a Source Partition from Basic Drive 95
Figure B-16: File Name to Copy Image to 96
Figure B-17: Compress Image....96
Figure B-18: Image Creation Confirmation 97
Figure B-19: Image Creation Process....97
Figure B-20: Image Creation Complete 97
Figure B-21: Press Any Key to Continue 98
Figure B-22: Partitions for Linux....99
Figure B-23: System Configuration for Linux.... 100
Figure B-24: Access menu.lst in Linux (Text Mode).... 100

Figure B-25: Recovery Tool Menu 101
Figure B-26: Recovery Tool Main Menu 102
Figure B-27: Restore Factory Default 103
Figure B-28: Recovery Complete Window 103
Figure B-29: Backup System 104
Figure B-30: System Backup Complete Window 104
Figure B-31: Restore Backup 105
Figure B-32: Restore System Backup Complete Window 105
Figure B-33: Symantec Ghost Window 106

List of Tables

Table 1-1: Technical Specifications 7
Table 2-1: Packing List 11
Table 2-2: Optional Items 11
Table 3-1: Peripheral Interface Connectors 14
Table 3-2: Rear Panel Connectors 14
Table 3-3: Audio Connector Pinouts 15
Table 3-4: CompactFlash® Slot Pinouts 17
Table 3-5: Digital I/O Connector Pinouts 18
Table 3-6: Fan Connector Pinouts 18
Table 3-7: Keyboard/Mouse Connector Pinouts 19
Table 3-8: LVDS1 Connector Pinouts 20
Table 3-9: Backlight Inverter Connector 21
Table 3-10: PCIe Mini Card Slot Pinouts 22
Table 3-11: Power Button Connector Pinouts 23
Table 3-12: Reset Button Connector Pinouts 24
Table 3-13: LED and +5 V Power Output Connector Pinouts 24
Table 3-14: LED and +5 V Power Output Connector Pinouts 25
Table 3-15: RS-232/422/485 Serial Port Connector Pinouts 26
Table 3-16: Serial Port Connector Pinouts 27
Table 3-17: SATA Drive Connector Pinouts 27
Table 3-18: SATA Power Connector Pinouts 28
Table 3-19: USB Port Connector Pinouts 29
Table 3-20: LAN1 Connector Pinouts 30
Table 3-21: LAN2 Connector Pinouts 30
Table 3-22: RJ-45 Ethernet Connector LEDs 31
Table 3-23: Serial Port Pinouts 31
Table 3-24: USB Connector Pinouts 32
Table 3-25: VGA Connector Pinouts 32
Table 4-1: Jumpers 39
Table 4-2: LVDS1 Voltage Selection 39

Table 4-3: Clear CMOS Jumper Settings....40
Table 4-4: COM2 Port Mode Settings....41
Table 4-5: AT/ATX Power Mode Settings....42
Table 5-1: BIOS Navigation Keys....56

BIOS Menus

BIOS Menu 1: Main 57
BIOS Menu 2: Advanced 58
BIOS Menu 3: ACPI Configuration 59
BIOS Menu 4: CPU Configuration 60
BIOS Menu 5: IDE Configuration 61
BIOS Menu 6: USB Configuration 62
BIOS Menu 7: Super IO Configuration 64
BIOS Menu 8: Serial Port n Configuration Menu 64
BIOS Menu 9: Hardware Health Configuration 68
BIOS Menu 10: Serial Port Console Redirection 70
BIOS Menu 11: Chipset 71
BIOS Menu 12:Host Bridge Configuration 71
BIOS Menu 13:Southbridge Chipset Configuration 72
BIOS Menu 14: Intel IGD SWSCI OpRegion 73
BIOS Menu 15: Boot 75
BIOS Menu 16: Security 77
BIOS Menu 17:Exit 78

Chapter

1

Introduction

1.1 Introduction

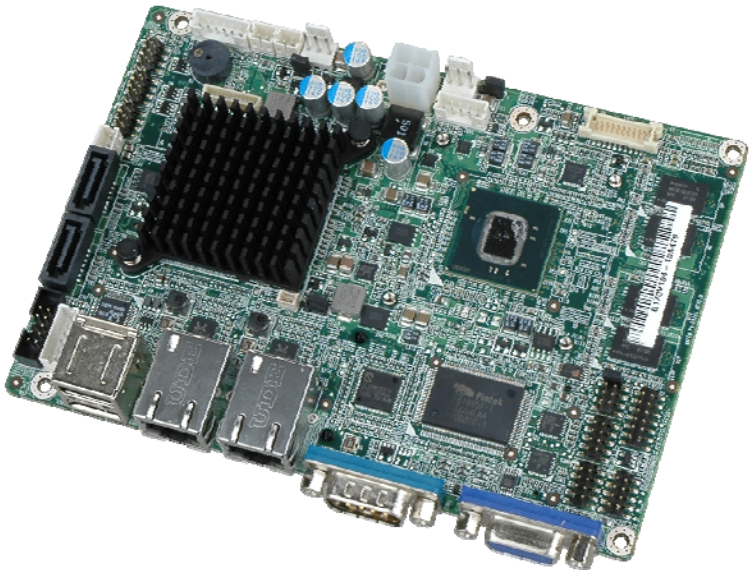

Figure 1-1: WAFER-PV-D4251/D5251/N4551

The WAFER-PV-D4251/D5251/N4551 is a 3.5" SBC with an Intel® Atom™ D425, D525 or N455 CPU. It features onboard 1GB DDR3 800MHz SDRAM.

On board storage is handled by two SATA 3Gb/s ports for connecting a hard drive, optical drive or SSD. The CompactFlash® slot allows a Type II CompactFlash® card to be installed.

The board has two graphics outputs. A VGA output connects to a traditional VGA monitor and one LVDS connector supports 18-bit single-channel display.

Other slots and connectors include a PCIe Mini card slot, three RS-232 ports, one RS-232/422/485 port with Auto Flow control, dual Gigabit Ethernet ports, eight USB 2.0 ports, and a digital I/O port.

1.2 Benefits

Some of the WAFER-PV-D4251/D5251/N4551 motherboard benefits include:

- Low power consumption
- Wide range of I/O interfaces
- Dual display support

1.3 Features

Some of the WAFER-PV-D4251/D5251/N4551 motherboard features are listed below:

- 3.5" form factor
- 1 GB Memory On Board
- RoHS compliant
- Eight USB 2.0 ports
- Four serial ports
- Two SATA 3Gb/s ports
- PCIe Mini card slot
- CompactFlash® Type II slot
- Gigabit Ethernet

1.4 Connectors

The connectors on the WAFER-PV-D4251/D5251/N4551 are shown in the following figure.

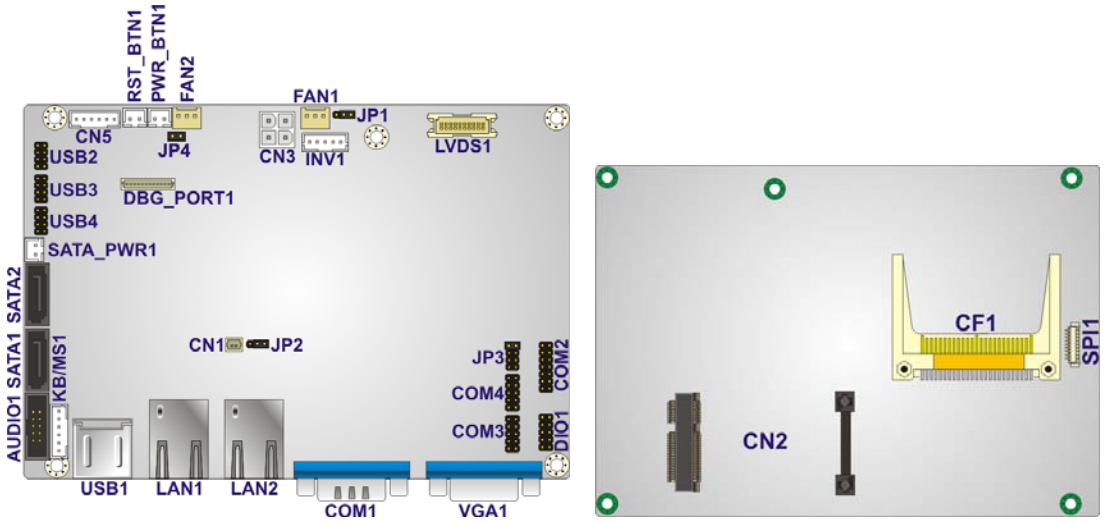

Figure 1-2: Connectors

1.5 Dimensions

The main dimensions of the WAFER-PV-D4251/D5251/N4551 are shown in the diagram below.

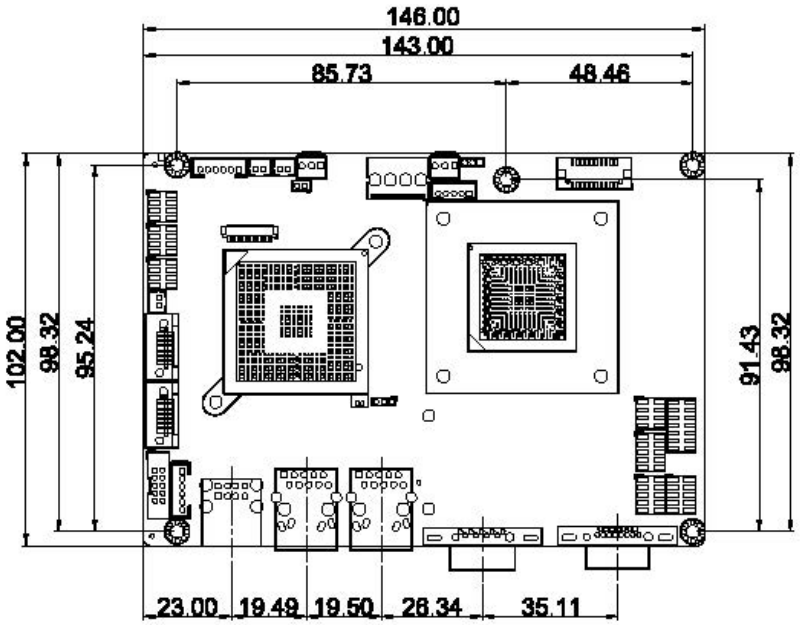

Figure 1-3: Dimensions without Heatsink (mm)

1.6 Data Flow

Figure 1-4 shows the data flow between the system chipset, the CPU and other components installed on the motherboard.

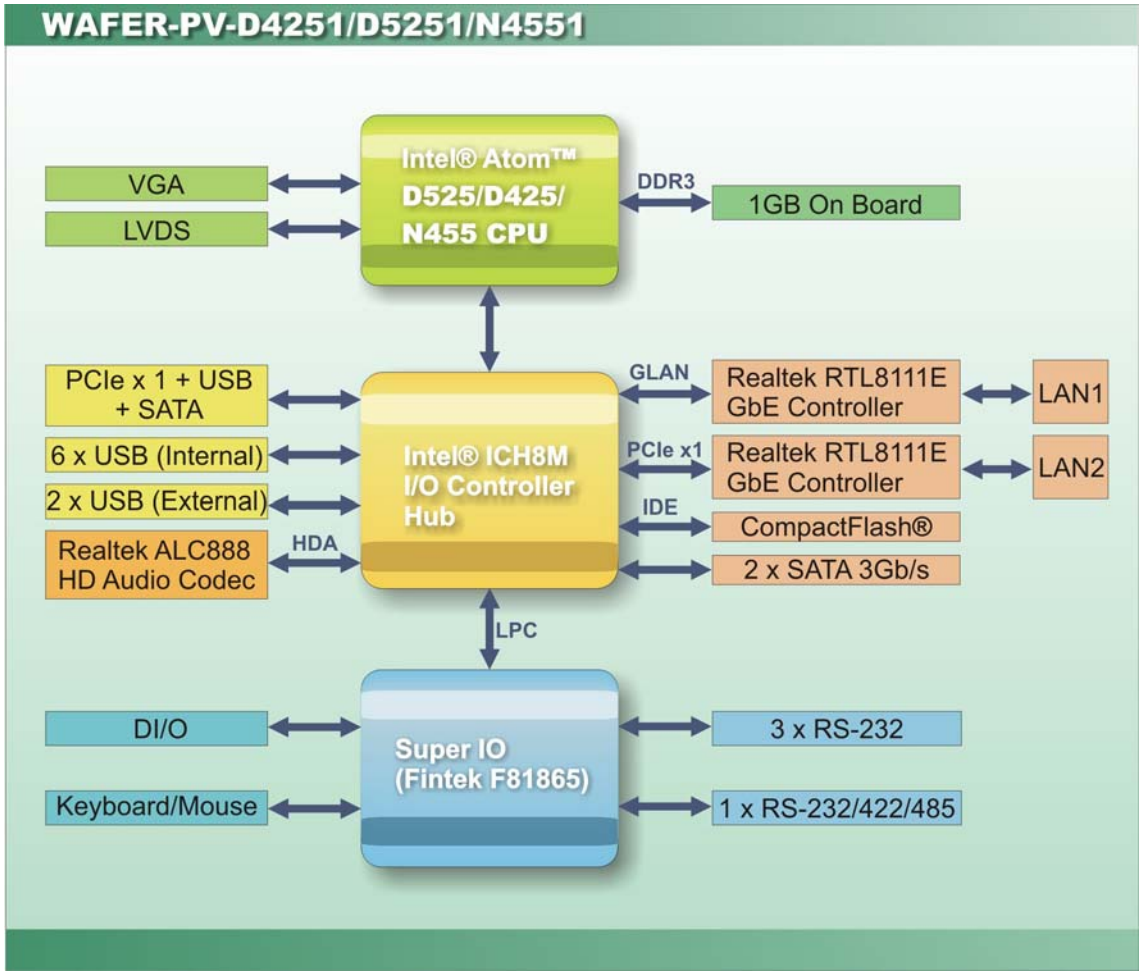

Figure 1-4: Data Flow Diagram

1.7 Technical Specifications

WAFER-PV-D4251/D5251/N4551 technical specifications are listed in Table 1-1.

Specification	WAFER-PV-D4251/D5251/N4551
Form Factor	3.5"
Socket	Embedded

CPU Supported	1.8 GHz Intel® Atom™ D525 dual-core CPU with 1 MB L2 cache 1.8 GHz Intel® Atom™ D425 single-core CPU with 512 KB L2 cache 1.66 GHz Intel® Atom™ N455 single-core CPU with 512 KB L2 cache
System Chipset	Intel® ICH8M
Memory	On board DDR3 800MHz 1GB SDRAM
Graphic Engine	Intel® GMA3150 ▪ D525/D425: Gen 3.5 DX9, 400 MHz ▪ N455: Gen 3.5 DX9, 200 MHz
Integrated Graphics	Analog CRT (CRT hot plug supported) ▪ D525/D425: up to 2048 x 1536 ▪ N455: up to 1400 x 1050 18-bit single-channel LVDS
BIOS	UEFI BIOS
Digital I/O	8-bit, 4-bit input/4-bit output
Ethernet Controllers	Two Realtek RTL8111E PCIe GbE controllers (LAN1 supports ASF2.0)
Audio	Realtek ALC888 HD Audio codec
Super I/O Controller	Fintek F81865
Watchdog Timer	Software programmable supports 1~255 sec. system reset
Expansion	PCIe Mini slot (PCIe + USB + SATA signal) supports IEI PCIe Mini disk on module (DOM) cards
I/O Interface Connectors	
Fan connector	One 3-pin wafer CPU fan One 3-pin wafer system fan
Keyboard/Mouse	One internal 6-pin wafer connector
Serial Ports	Three RS-232 COM connectors One RS-232/422/485 COM connector
USB 2.0/1.1 ports	Six internal via pin header Two external USB ports

Storage	
IDE	CompactFlash® Type II slot
SATA	Two independent SATA channels with 3.0 Gb/s data transfer rates
Environmental and Power Specifications	
Power Supply	AT or ATX 12 V only One 4-pin internal power connector
Power Consumption	12 V @ 1.68A (1.8 GHz Intel® Atom™ D525 dual-core CPU with one 1 GB DDR3 SO-DIMM)
Operating temperature	D525: -20ºC ~ 60ºC with free air; -20ºC ~ 70ºC with force air D425: -20ºC ~ 65ºC with free air; -20ºC ~ 70ºC with force air N455: -20ºC ~ 70ºC with free air; -20ºC ~ 75ºC with force air
Humidity	5% ~ 95% (non-condensing)
Physical Specifications	
Dimensions	146 mm x 102 mm
Weight GW/NW	650 g / 170 g

Table 1-1: Technical Specifications

Chapter

2

Packing List

2.1 Anti-static Precautions

WARNING!

Static electricity can destroy certain electronics. Make sure to follow the ESD precautions to prevent damage to the product, and injury to the user.

Make sure to adhere to the following guidelines:

- ***Wear an anti-static wristband***: - Wearing an anti-static wristband can prevent electrostatic discharge.
- ***Self-grounding***:- Touch a grounded conductor every few minutes to discharge any excess static buildup.
- ***Use an anti-static pad***: When configuring any circuit board, place it on an anti-static mat.
- ***Only handle the edges of the PCB***: Don't touch the surface of the motherboard. Hold the motherboard by the edges when handling.

2.2 Unpacking Precautions

When the WAFER-PV-D4251/D5251/N4551 is unpacked, please do the following:

- Follow the antistatic guidelines above.
- Make sure the packing box is facing upwards when opening.
- Make sure all the packing list items are present.

2.3 Packing List

NOTE:

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the WAFER-PV-D4251/D5251/N4551 was purchased from or contact an IEI sales representative directly by sending an email to sales@iei.com.tw.

The WAFER-PV-D4251/D5251/N4551 is shipped with the following components:

Quantity	Item and Part Number	Image
1	WAFER--PV-D4251, WAFER-PV-D5251 or WAFER--PV-N4551	
1	SATA and power cable (**P/N:** 32801-000201-100-RS)	
1	KB/MS PS/2 Y-cable (**P/N**: 32000-023800-RS)	
1	Power cable (**P/N**: 32102-009800-100-RS)	
1	Audio cable (**P/N:** 32000-072100-RS)	
1	Mini jumper pack (2.0mm) (**P/N**:33100-000033-RS)	
1	Utility CD	

Quantity	Item and Part Number	Image
1	Quick installation guide	

Table 2-1: Packing List

2.4 Optional Items

These optional items are available.

Item and Part Number	Image
Dual USB cable (wo bracket) (**P/N**: 32000-070301-RS)	
RS-232/422/485 cable (**P/N**: 32205-000300-100-RS)	

Table 2-2: Optional Items

Chapter

3

Connector Pinouts

3.1 Peripheral Interface Connectors

Section 3.1.2 shows peripheral interface connector locations. **Section 3.1.2** lists all the peripheral interface connectors seen in **Section 3.1.2**.

3.1.1 Layout

The figure below shows the on-board peripheral connectors, rear panel peripheral connectors and on-board jumpers.

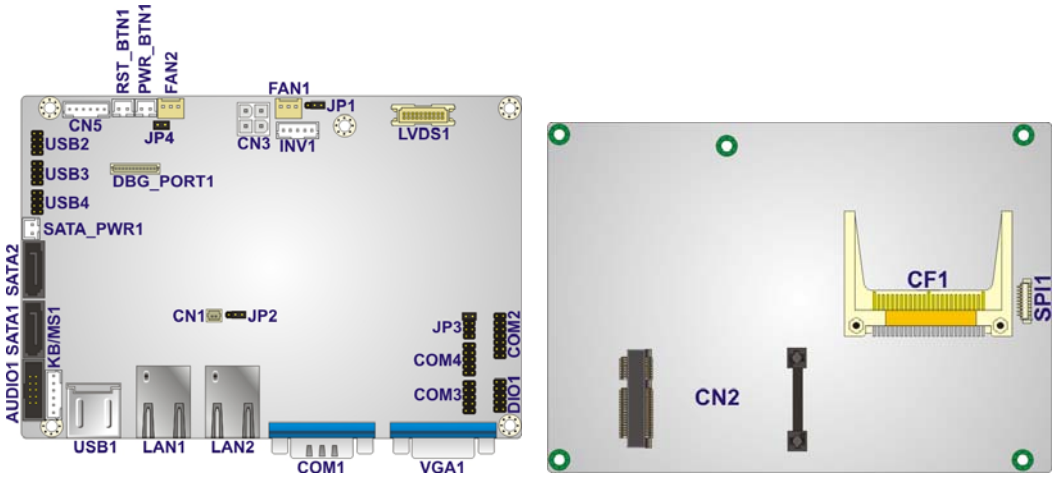

Figure 3-1: Connector and Jumper Locations

3.1.2 Peripheral Interface Connectors

The table below shows a list of the peripheral interface connectors on the WAFER-PV-D4251/D5251/N4551. Detailed descriptions of these connectors can be found below.

Connector	Type	Label
Audio connector	10-pin box header	AUDIO1
CompactFlash® card slot	CF card slot	CF1
Digital I/O connector	10-pin header	DIO1
Fan connectors	3-pin wafer	FAN1, FAN2
Keyboard/mouse connector	6-pin wafer	KB/MS1
LVDS connector	20-pin crimp	LVDS1

Connector	Type	Label
LVDS1 Panel backlight + 12 V power source	5-pin box header	INV1
PCIe Mini card slot	PCIe Mini card slot	CN2
Power button connector	2-pin wafer	PWR_BTN1
Reset button connector	2-pin wafer	RST_BTN1
Power output and HDD LED connector	6-pin wafer	CN5
Power source connector	4-pin connector	CN3
RS-232 serial port	14-pin header	COM2
Serial port connector	10-pin header	COM3, COM4
SATA drive connectors	SATA connector	SATA1, SATA2
SATA power connectors	2-pin wafer	SATA_PWR1
USB connectors	8-pin header	USB2, USB3, USB4

Table 3-1: Peripheral Interface Connectors

3.1.3 External Interface Panel Connectors

The table below lists the rear panel connectors on the WAFER-PV-D4251/D5251/N4551. Detailed descriptions of these connectors can be found in a later section.

Connector	Type	Label
USB connectors	Dual-USB	USB1
LAN connectors	RJ-45	LAN1, LAN2
Serial port connector	DB-9	COM1
VGA connector	15-pin female VGA	VGA1

Table 3-2: Rear Panel Connectors

3.2 Internal Peripheral Connectors

Internal peripheral connectors are found on the motherboard and are only accessible when the motherboard is outside of the chassis. This section has complete descriptions of all the internal, peripheral connectors on the WAFER-PV-D4251/D5251/N4551.

3.2.1 Audio Connector

CN Label: **AUDIO1**

CN Type: 10-pin header

CN Location: See **Figure 3-2**

CN Pinouts: See **Table 3-3**

This connector connects to speakers, a microphone and an audio input.

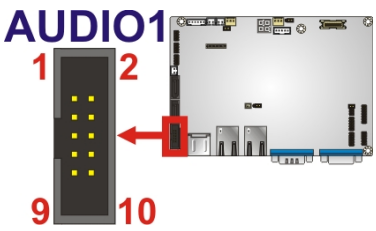

Figure 3-2: Audio Connector Location

Pin	Description	Pin	Description
1	SPK_R	2	LINEIN_R
3	AUD_GND	4	AUD_GND
5	SPK_L	6	LINE1_L
7	AUD_GND	8	AUD_GND
9	MIC1_R	10	MIC1_L

Table 3-3: Audio Connector Pinouts

3.2.2 CompactFlash® Slot

CN Label: **CF1**

CN Type: CompactFlash® card slot

CN Location: See **Figure 3-3**

CN Pinouts: See **Table 3-4**

NOTE:

1. Both CompactFlash® Type I and Type II cards are supported.
2. To use SATA and CF, CF must be set to slave.

A CompactFlash® Type I or Type II card can be used in this slot.

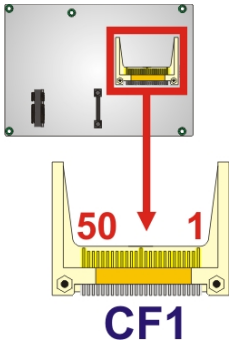

Figure 3-3: CompactFlash® Slot Location

Pin	Description	Pin	Description
1	GND	26	CD1#
2	D3	27	D11
3	D4	28	D12
4	D5	29	D13
5	D6	30	D14
6	D7	31	D15
7	CE#	32	CE2#
8	A10	33	VS1#
9	OE#	34	IOR#
10	A9	35	IOW#
11	A8	36	WE#
12	A7	37	IRQ
13	VCC	38	VCC
14	A6	39	CSEL#
15	A5	40	VS2#

Pin	Description	Pin	Description
16	A4	41	RESET#
17	A3	42	WAIT#
18	A2	43	INPACK#
19	A1	44	REG#
20	A0	45	BVD2
21	D0	46	BVD1
22	D1	47	D8
23	D2	48	D9
24	IOCS16#	49	D10
25	CD2#	50	GND2

Table 3-4: CompactFlash® Slot Pinouts

3.2.3 Digital I/O Connector

CN Label: **DIO1**

CN Type: 10-pin header

CN Location: See **Figure 3-4**

CN Pinouts: See **Table 3-5**

The digital I/O connector provides programmable input and output for external devices. The digital I/O provides 4-bit output and 4-bit input.

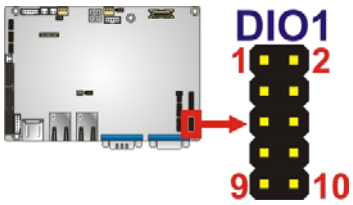

Figure 3-4: Digital I/O Connector Location

Pin	Description	Pin	Description
1	Ground	2	VCC
3	Output 3	4	Output 2
5	Output 1	6	Output 0

Pin	Description	Pin	Description
7	Input 3	8	Input 2
9	Input 1	10	Input 0

Table 3-5: Digital I/O Connector Pinouts

3.2.4 Fan Connectors

CN Label: **FAN1, FAN2**

CN Type: 3-pin wafer

CN Location: See **Figure 3-5**

CN Pinouts: See **Table 3-6**

The fan connector attaches to a cooling fan.

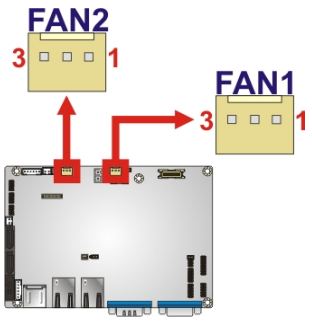

Figure 3-5: Fan Connector Locations

Pin	Description
1	Ground
2	+12V (PWM)
3	FANIO1

Table 3-6: Fan Connector Pinouts

3.2.5 Keyboard/Mouse Connector

CN Label: **KB/MS1**

CN Type: 6-pin wafer

CN Location: See **Figure 3-6**

CN Pinouts: See **Table 3-7**

The keyboard/mouse connector connects to a PS/2 Y-cable that can be connected to a PS/2 keyboard and mouse.

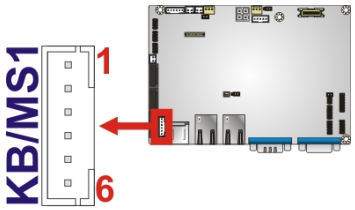

Figure 3-6: Keyboard/Mouse Connector Location

Pin	Description
1	VCC
2	Mouse Data
3	Mouse Clock
4	Keyboard Data
5	Keyboard Clock
6	GND

Table 3-7: Keyboard/Mouse Connector Pinouts

3.2.6 LVDS Connector

CN Label: **LVDS1**

CN Type: 20-pin crimp

CN Location: See **Figure 3-7**

CN Pinouts: See **Table 3-8**

The LVDS connector is for an LCD panel connected to the board.

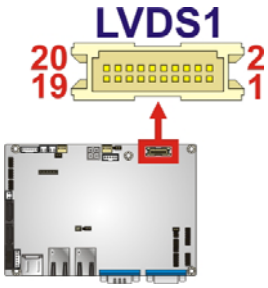

Figure 3-7: LVDS Connector Location

Pin	Description	Pin	Description
1	GND	2	GND
3	LVDS_DATA0	4	LVDS_DATA0#
5	LVDS_DATA1	6	LVDS_DATA1#
7	LVDS_DATA2	8	LVDS_DATA2#
9	LVDS_CLK	10	LVDS_CLK#
11	NC	12	NC
13	GND	14	GND
15	LDDC_DATA	16	LDDC_CLK
17	VCC_LCD	18	VCC_LCD
19	VCC_LCD	20	VCC_LCD

Table 3-8: LVDS1 Connector Pinouts

3.2.7 LVDS Backlight Connector

CN Label: **INV1**

CN Type: 5-pin header

CN Location: See **Figure 3-8**

CN Pinouts: See **Table 3-9**

The backlight inverter connector provides power to an LCD panel.

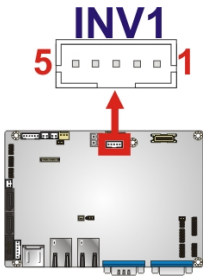

Figure 3-8: Backlight Inverter Connector

Pin	Description
1	LCD_BKLTCTL
2	GROUND
3	+12V
4	GROUND
5	BACKLIGHT ENABLE

Table 3-9: Backlight Inverter Connector

3.2.8 PCIe Mini Card Slot

CN Label: **CN2**

CN Type: PCIe Mini card slot

CN Location: See **Figure 3-9**

CN Pinouts: See **Table 3-10**

The PCIe mini card slot enables a PCIe mini card expansion module to be connected to the board. Cards supported include among others wireless LAN (WLAN) cards and IEI PCIe Mini disk on module (DOM) SSD cards.

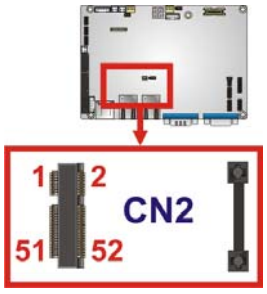

Figure 3-9: PCIe Mini Card Slot Location

Pin	Description	Pin	Description
1	PCIE_WAKE#	2	VCC3
3	N/C	4	GND
5	N/C	6	1.5V
7	N/C	8	N/C
9	GND	10	N/C
11	PCIE_CLK#	12	N/C
13	PCIE_CLK	14	N/C
15	GND	16	N/C
17	N/C	18	GND
19	N/C	20	N/C
21	GND	22	PCIRST#
23	PCIE_RXN	24	VCC3
25	PCIE_RXP	26	GND
27	GND	28	1.5V
29	GND	30	SMBCLK
31	PCIE_TXN	32	SMBDATA
33	PCIE_TXP	34	GND
35	GND	36	USBD-
37	GND	38	USBD+
39	VCC3	40	GND
41	VCC3	42	N/C
43	GND	44	N/C
45	SATA_TXP	46	N/C
47	SATA_TXN	48	1.5V
49	SATA_RXN	50	GND
51	SATA_RXP	52	VCC3

Table 3-10: PCIe Mini Card Slot Pinouts

3.2.9 Power Button Connector

CN Label: **PWR_BTN**

CN Type: 2-pin wafer

CN Location: See **Figure 3-10**

CN Pinouts: See **Table 3-11**

The power button connector is connected to a power switch on the system chassis.

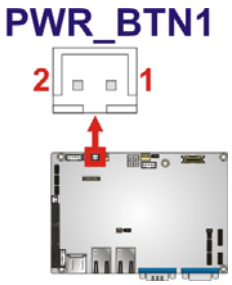

Figure 3-10: Power Button Connector Location

Pin	Description
1	PWR_BTN+
2	PWR_BTN-

Table 3-11: Power Button Connector Pinouts

3.2.10 Reset Button Connector

CN Label: **RST_BTN**

CN Type: 2-pin wafer

CN Location: See **Figure 3-11**

CN Pinouts: See **Table 3-12**

The reset button connector is connected to a reset switch on the system chassis.

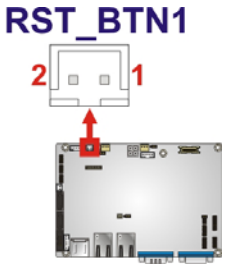

Figure 3-11: Reset Button Connector Location

Pin	Description
1	RESET+
2	RESET-

Table 3-12: Reset Button Connector Pinouts

3.2.11 Power Output and HDD LED Connector

CN Label: **CN5**

CN Type: 6-pin wafer

CN Location: See **Figure 3-12**

CN Pinouts: See **Table 3-13**

The connector connects to the hard drive activity LED and power LED on the system front panel. +5 V power output is also provided via this connector.

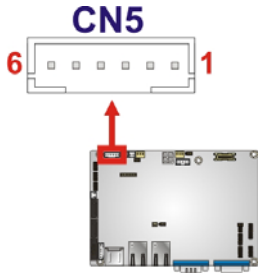

Figure 3-12: LED and +5 V Power Output Connector Location

	Pin	Description
+5 V Power Output	1	VCC
	2	GND
Power LED	3	PWR_LED+
	4	PWR_LED-
HDD LED	5	HDD_LED+
	6	HDD_LED-

Table 3-13: LED and +5 V Power Output Connector Pinouts

3.2.12 Power Source Connector

CN Label: **CN3**

CN Type: 4-pin connector

CN Location: See **Figure 3-13**

CN Pinouts: See **Table 3-14**

The connector supports a +12 V main power supply.

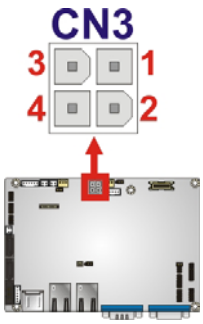

Figure 3-13: LED and +5 V Power Output Connector Location

Pin	Description
1	GND
2	GND
3	VCC12
4	VCC12

Table 3-14: LED and +5 V Power Output Connector Pinouts

3.2.13 Serial Port Connector (COM2)

CN Label: **COM2**

CN Type: 14-pin header

CN Location: See **Figure 3-14**

CN Pinouts: See **Table 3-15**

This connector provides RS-232, RS-422 or RS-485 communications.

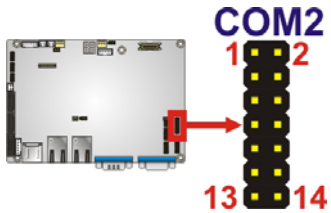

Figure 3-14: RS-232/422/485 Serial Port Connector Location

Pin	Description	Pin	Description
1	Data Carrier Direct (DCD)	2	Data Set Ready (DSR)
3	Receive Data (RXD)	4	Request To Send (RTS)
5	Transmit Data (TXD)	6	Clear To Send (CTS)
7	Data Terminal Ready (DTR)	8	Ring Indicator (RI)
9	Ground (GND)	10	Ground (GND)
11	TXD485+	12	TXD485#
13	RXD485+	14	RXD485#

Table 3-15: RS-232/422/485 Serial Port Connector Pinouts

3.2.14 RS-232 Serial Port Connector (COM3, COM4)

CN Label: **COM3, COM4**

CN Type: 10-pin header

CN Location: See **Figure 3-15**

CN Pinouts: See **Table 3-16**

This connector provides RS-232 connections for four serial ports (COM3, COM4).

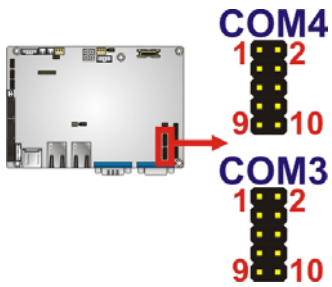

Figure 3-15: RS-232 Serial Port Connector Location

Pin	Description	Pin	Description
1	DATA CARRIER DETECT (DCD)	2	DATA SET READY (DSR)
3	RECEIVE DATA (RXD)	4	REQUEST TO SEND (RTS)
5	TRANSMIT DATA (TXD)	6	CLEAR TO SEND (CTS)
7	DATA TERMINAL READY (DTR)	8	RING INDICATOR (RI)
9	GND	10	GND

Table 3-16: Serial Port Connector Pinouts

3.2.15 SATA Drive Connectors

CN Label: **SATA1, SATA2**

CN Type: 8-pin SATA drive connectors

CN Location: See **Figure 3-16**

CN Pinouts: See **Table 3-17**

The SATA connectors connect to SATA hard drives or optical drives.

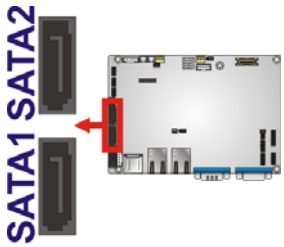

Figure 3-16: SATA Drive Connector Location

Pin	Description
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND
8	N/C

Table 3-17: SATA Drive Connector Pinouts

3.2.16 SATA Power Connectors

CN Label:	**SATA_PWR1**
CN Type:	2-pin wafer
CN Location:	See **Figure 3-17**
CN Pinouts:	See **Table 3-18**

Use the SATA Power Connector to connect to SATA device power connections.

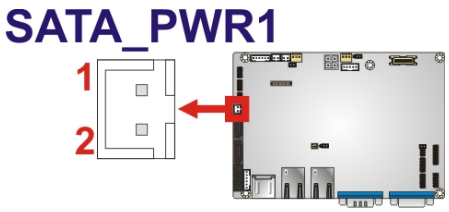

Figure 3-17: SATA Power Connector Locations

Pin	Description
1	VCC5
2	GND

Table 3-18: SATA Power Connector Pinouts

3.2.17 USB Connectors

CN Label:	**USB2, USB3, USB4**
CN Type:	8-pin header
CN Location:	See **Figure 3-18**
CN Pinouts:	See **Table 3-19**

The USB header can connect to two USB devices.

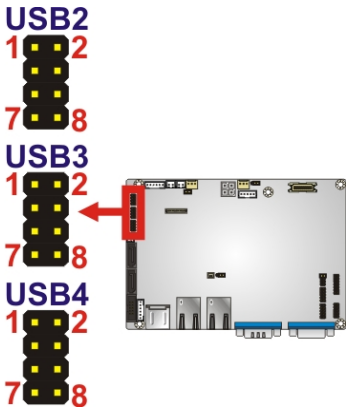

Figure 3-18: USB Connector Location

Pin	Description	Pin	Description
1	USB_VCC	2	GND
3	DATA-	4	DATA+
5	DATA+	6	DATA-
7	GND	8	VCC

Table 3-19: USB Port Connector Pinouts

3.3 External Interface Connectors

Figure 3-19 shows the WAFER-PV-D4251/D5251/N4551 motherboard external interface connectors. The WAFER-PV-D4251/D5251/N4551 on-board external interface connectors are shown in Figure 3-19**.**

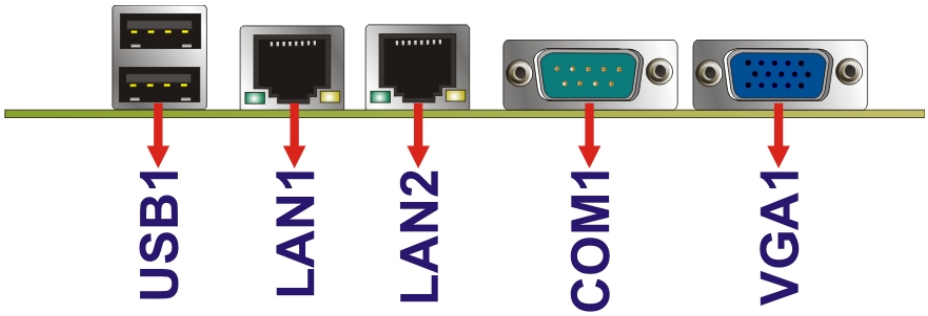

Figure 3-19: External Interface Connectors

3.3.1 Ethernet Connectors

CN Label: **LAN1, LAN2**

CN Type: RJ-45

CN Location: See **Figure 3-19**

CN Pinouts: See **Table 3-20**

A 10/100/1000 Mb/s connection can be made to a Local Area Network.

Pin	Description	Pin	Description
1	LAN1_MDI0+	5	LAN1_MDI2+
2	LAN1_MDI0-	6	LAN1_MDI2-
3.	LAN1_MDI1+	7	LAN1_MDI3+
4.	LAN1_MDI1-	8	LAN1_MDI3-

Table 3-20: LAN1 Connector Pinouts

Pin	Description	Pin	Description
1	LAN2_MDI0+	5	LAN2_MDI2+
2	LAN2_MDI0-	6	LAN2_MDI2-
3.	LAN2_MDI1+	7	LAN2_MDI3+
4.	LAN2_MDI1-	8	LAN2_MDI3-

Table 3-21: LAN2 Connector Pinouts

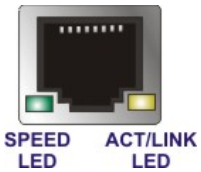

Figure 3-20: Ethernet Connector

The RJ-45 Ethernet connector has two status LEDs, one green and one yellow. The green LED indicates activity on the port and the yellow LED indicates the port is linked. See **Table 3-22**.

SPEED LED		ACT/LINK LED	
STATUS	DESCRIPTION	STATUS	DESCRIPTION

OFF	10Mbps connection	OFF	No link
GREEN	100Mbps connection	YELLOW	Linked
ORANGE	1Gbps connection	BLINKING	Data Activity

Table 3-22: RJ-45 Ethernet Connector LEDs

3.3.2 Serial Port Connector

CN Label: **COM1**

CN Type: DB-9 Male connector

CN Location: See **Figure 3-19**

CN Pinouts: See **Table 3-23** and **Figure 3-21**

The RS-232 serial connector provides serial connection in the RS-232 mode.

Pin	Description	Pin	Description
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	GND		

Table 3-23: Serial Port Pinouts

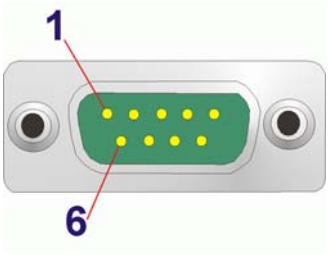

Figure 3-21: Serial Port Pinout Locations

3.3.3 USB Ports

CN Label: **USB1**

CN Type: USB Combo ports

CN Location: See **Figure 3-19**

CN Pinouts: See **Table 3-24**

The USB ports attach to standard USB devices.

Pin	Description
1	USB_VCC
2	USB_VCC
3	Data1-
4	Data1-
5	Data1+
6	Data1+
7	Ground
8	Ground

Table 3-24: USB Connector Pinouts

3.3.4 VGA Connector

CN Label: **VGA1**

CN Type: D-sub 15-pin female connector

CN Location: See **Figure 3-19**

CN Pinouts: See **Figure 3-22** an **Table 3-25**

The standard 15-pin female VGA connector connects to a CRT or LCD monitor.

Pin	Description	Pin	Description	Pin	Description
1	RED	6	GROUND	11	NC
2	GREEN	7	GROUND	12	DDCDAT
3	BLUE	8	GROUND	13	HSYNC
4	NC	9	VCC	14	VSYNC
5	GROUND	10	GROUND	15	DDCCLK

Table 3-25: VGA Connector Pinouts

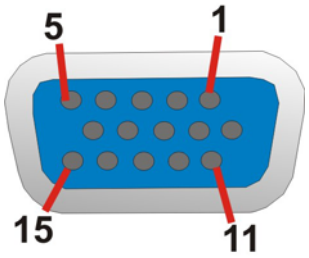

Figure 3-22: VGA Connector

Chapter

4

Installation

4.1 Anti-static Precautions

WARNING:

Failure to take ESD precautions during installation may result in permanent damage to the product and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the WAFER-PV-D4251/D5251/N4551. Dry climates are especially susceptible to ESD. It is therefore critical to strictly adhere to the following anti-static precautions whenever the WAFER-PV-D4251/D5251/N4551, or any other electrical component, is handled.

- ***Wear an anti-static wristband***: - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding***:- Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad***: When configuring the WAFER-PV-D4251/D5251/N4551, place it on an antic-static pad. This reduces the possibility of ESD damaging the WAFER-PV-D4251/D5251/N4551.
- ***Only handle the edges of the PCB***:-: When handling the PCB, hold it by the edges.

4.2 Installation Considerations

NOTE:

The following installation notices and installation considerations should be read and understood before the WAFER-PV-D4251/D5251/N4551 is installed. All installation notices pertaining to the installation of WAFER-PV-D4251/D5251/N4551 should be strictly adhered to. Failing to adhere to these precautions may lead to severe damage of the WAFER-PV-D4251/D5251/N4551 and injury to the person installing the motherboard.

WARNING:

The installation instructions described in this manual should be carefully followed in order to prevent damage to the WAFER-PV-D4251/D5251/N4551, WAFER-PV-D4251/D5251/N4551 components and injury to the user.

Before and during the installation please **DO** the following:

- **Read the user manual**:
  - The user manual provides a complete description of the installation instructions and configuration options.
- **Wear an electrostatic discharge cuff (ESD)**:
  - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- **Place on an antistatic pad**:
  - When installing or configuring the motherboard, place it on an antistatic pad. This helps to prevent potential ESD damage.
- **Turn all power off**:
  - Make sure the product is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the WAFER-PV-D4251/D5251/N4551 **DO NOT:**

- **DO NOT** remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- **DO NOT** use the product before verifying all the cables and power connectors are properly connected.
- **DO NOT** allow screws to come in contact with the PCB circuit, connector pins, or its components.

4.3 CompactFlash® Installation

NOTE:

Both CompactFlash® Type I and Type II cards are supported.

To install the CompactFlash® card, please follow the steps below.

Step 1: **Locate the CF card socket**. Locate the CompactFlash® slot.

Step 2: **Align the CF card**. Align the CompactFlash® card. The label side should be facing away from the board. The grooves on the CompactFlash® slot ensure that the card cannot be inserted the wrong way.

Step 3: **Insert the CF card**. Push until the CompactFlash® card is firmly seated in the slot. See Figure 4-1.

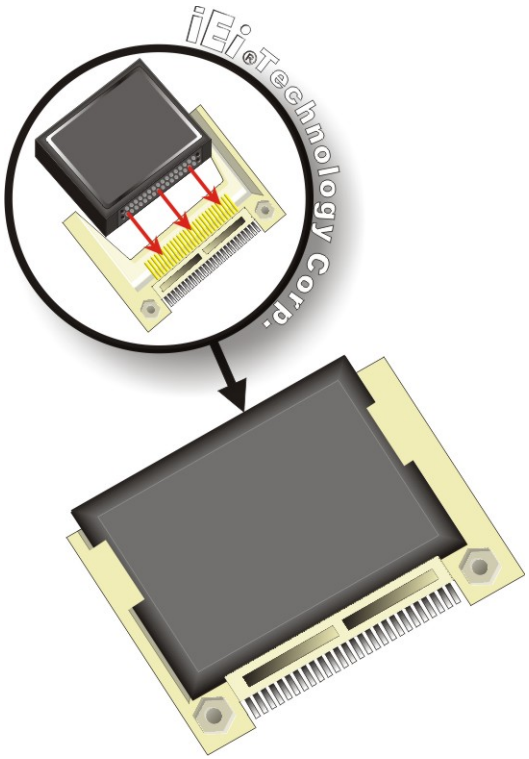

Figure 4-1: CompactFlash® Card Installation

4.4 Jumper Settings

NOTE:

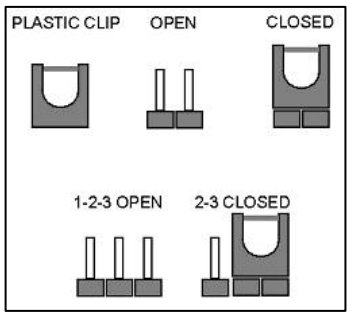

A jumper is a metal bridge that is used to close an electrical circuit. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To CLOSE/SHORT a jumper means connecting the pins of the jumper with the plastic clip and to OPEN a jumper means removing the plastic clip from a jumper.

Before the WAFER-PV-D4251/D5251/N4551 is installed in the system, the jumpers must be set in accordance with the desired configuration. The jumpers on the WAFER-PV-D4251/D5251/N4551 are listed in Table 4-1.

Description	Label	Type
LVDS1 voltage selection	JP1	3-pin header
Clear CMOS	JP2	3-pin header
COM2 port mode setting	JP3	8-pin header
AT/ATX mode setting	JP4	2-pin header

Table 4-1: Jumpers

4.4.1 LVDS1 Voltage Selection Jumper

Jumper Label: **JP1**

Jumper Type: 3-pin header

Jumper Settings: See **Table 4-2**

Jumper Location: See **Figure 4-2**

Selects the voltage of the LVDS connector.

Pin	Description
Short 1-2	+3.3V LVDS
Short 2-3	+5V LVDS

Table 4-2: LVDS1 Voltage Selection

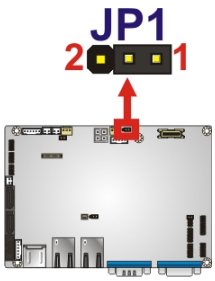

Figure 4-2: LVDS1 Voltage Selection Jumper Location

4.4.2 Clear CMOS Jumper

Jumper Label:	**JP2**
Jumper Type:	3-pin header
Jumper Settings:	See **Table 4-3**
Jumper Location:	See **Figure 4-3**

If the WAFER-PV-D4251/D5251/N4551 fails to boot due to improper BIOS settings, the clear CMOS jumper clears the CMOS data and resets the system BIOS information. To do this, use the jumper cap to close pins 2 and 3 for a few seconds then reinstall the jumper clip back to pins 1 and 2.

If the “CMOS Settings Wrong” message is displayed during the boot up process, the fault may be corrected by pressing the F1 to enter the CMOS Setup menu. Do one of the following:

- Enter the correct CMOS setting
- Load Optimal Defaults
- Load Failsafe Defaults.

After having done one of the above, save the changes and exit the CMOS Setup menu.

The clear CMOS jumper settings are shown in Table 4-3.

Pin	Description
1-2	Keep CMOS Setup (Default)
2-3	Clear CMOS Setup

Table 4-3: Clear CMOS Jumper Settings

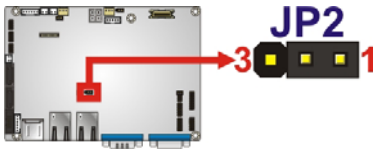

Figure 4-3: Clear CMOS Jumper Location

4.4.3 COM2 Port Mode Setting Jumper

Jumper Label: **JP3**

Jumper Type: 8-pin header

Jumper Settings: See **Table 4-4**

Jumper Location: See **Figure 4-4**

Selects the communication method of COM2 serial port.

Pin	Description
Short 1-2	RS-232
Short 3-4	RS-422
Short 5-6	RS-485
Short 5-6, 7-8	RS-485 with RTS Control

Table 4-4: COM2 Port Mode Settings

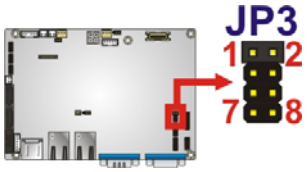

Figure 4-4: COM2 Port Mode Setting Jumper Location

4.4.4 AT/ATX Power Mode Setting Jumper

Jumper Label: **JP4**

Jumper Type: 2-pin header

Jumper Settings: See **Table 4-5**

Jumper Location: See **Figure 4-5**

Set both of the jumpers select AT or ATX power mode for the WAFER-PV-D4251/D5251/N4551. AT power mode limits the system to on/off. ATX allows the system to use various power saving states and enter a standby state, so the system can be turned on remotely over a network. The settings on both jumpers should be the same.

Pin	Description
Short 1-2	ATX Power Mode (Default)
OFF	AT Power Mode

Table 4-5: AT/ATX Power Mode Settings

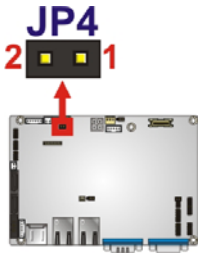

Figure 4-5: AT/ATX Power Mode Setting Jumper Location

4.5 Chassis Installation

4.5.1 Airflow

WARNING:

Airflow is critical for keeping components within recommended operating temperatures. The chassis should have fans and vents as necessary to keep things cool.

The WAFER-PV-D4251/D5251/N4551 must be installed in a chassis with ventilation holes on the sides allowing airflow to travel through the heat sink surface. In a system with an individual power supply unit, the cooling fan of a power supply can also help generate airflow through the board surface.

4.5.2 Motherboard Installation

To install the WAFER-PV-D4251/D5251/N4551 motherboard into the chassis please refer to the reference material that came with the chassis.

4.6 Internal Peripheral Device Connections

This section outlines the installation of peripheral devices to the onboard connectors.

4.6.1 AT Power Connection

Follow the instructions below to connect the WAFER-PV-D4251/D5251/N4551 to an AT power supply.

WARNING:

Disconnect the power supply power cord from its AC power source to prevent a sudden power surge to the WAFER-PV-D4251/D5251/N4551.

Step 1: **Locate the power cable**. The power cable is shown in the packing list in **Chapter 3**.

Step 2: **Connect the Power Cable to the Motherboard**. Connect the 4-pin (2x2) Molex type power cable connector to the AT power connector on the motherboard. See Figure 4-6.

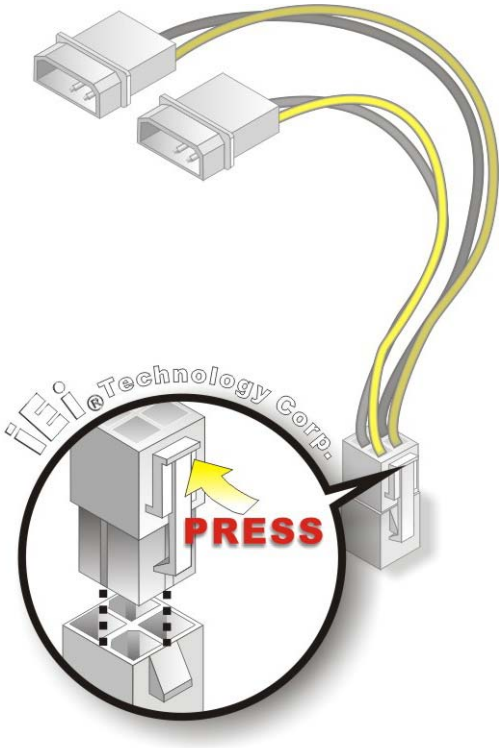

Figure 4-6: Power Cable to Motherboard Connection

Step 3: **Connect Power Cable to Power Supply**. Connect one of the 4-pin (1x4) Molex type power cable connectors to an AT power supply. See Figure 4-8.

4.6.2 Audio Kit Installation

The Audio Kit that came with the WAFER-PV-D4251/D5251/N4551 connects to the audio connector on the WAFER-PV-D4251/D5251/N4551. The audio kit consists of three audio jacks. Mic-in connects to a microphone. Line-in provides a stereo line-level input to connect to the output of an audio device. Line-out, a stereo line-level output, connects to two amplified speakers. To install the audio kit, please refer to the steps below:

Step 1: **Locate the audio connector**. The location of the 10-pin audio connector is shown in **Chapter 3**.

Step 2: **Align pin 1**. Align pin 1 on the on-board connector with pin 1 on the audio kit connector. Pin 1 on the audio kit connector is indicated with a white dot. See Figure 4-7.

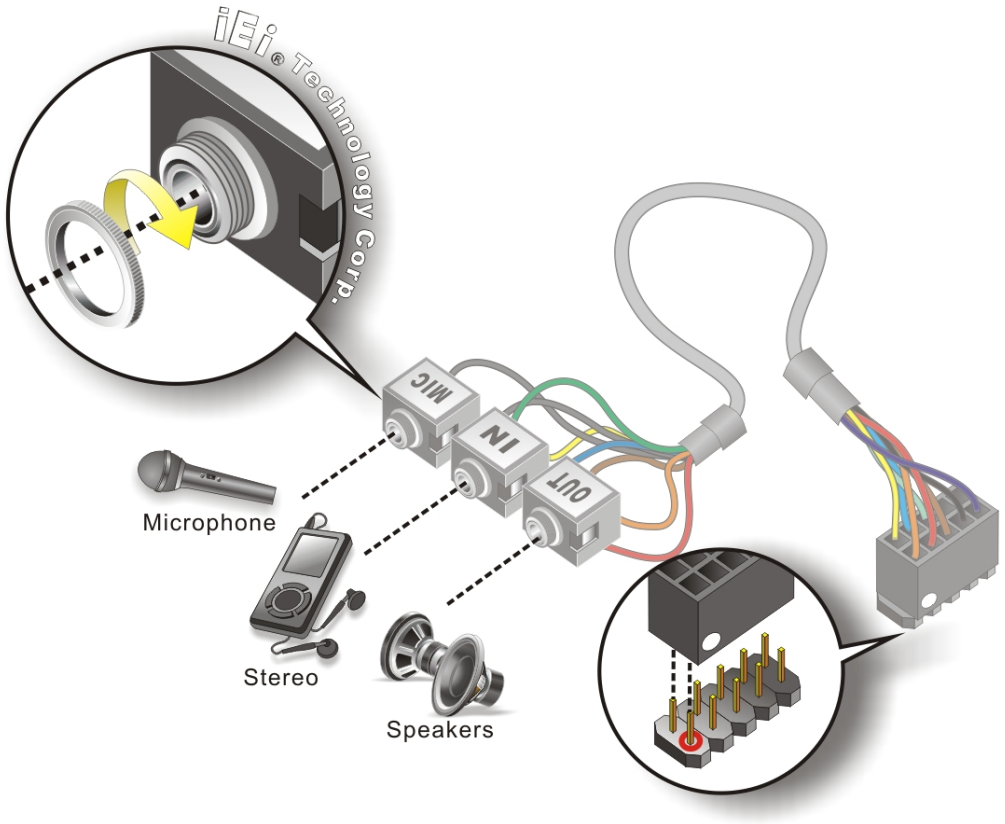

Figure 4-7: Audio Kit Cable Connection

Step 3: **Connect the audio devices**. Connect speakers to the line-out audio jack. Connect the output of an audio device to the line-in audio jack. Connect a microphone to the mic-in audio jack.

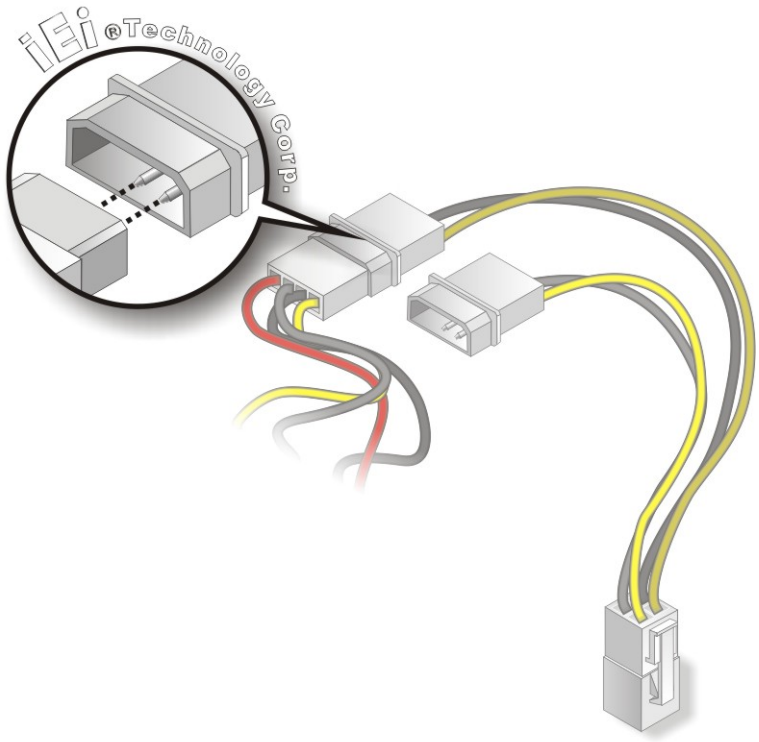

Figure 4-8: Connect Power Cable to Power Supply

4.6.3 Keyboard/Mouse Connector

The WAFER-PV-D4251/D5251/N4551 is shipped with a keyboard/mouse Y-cable connector. The keyboard/mouse Y-cable connector connects to a keyboard/mouse connector on the WAFER-PV-D4251/D5251/N4551 and branches into two cables that are each connected to a PS/2 connector, one for a mouse and one for a keyboard. To connect the keyboard/mouse Y-cable connector, please follow the steps below.

Step 1: **Locate the connector**. The location of the keyboard/mouse Y-cable connector is shown in **Chapter 3**.

Step 2: **Align the connectors**. Correctly align pin 1 on the cable connector with pin 1 on the WAFER-PV-D4251/D5251/N4551 keyboard/mouse connector. See Figure 4-9.

Step 3: **Insert the cable connectors** Once the cable connector is properly aligned with the keyboard/mouse connector on the WAFER-PV-D4251/D5251/N4551, connect the cable connector to the on-board connectors. See Figure 4-9.

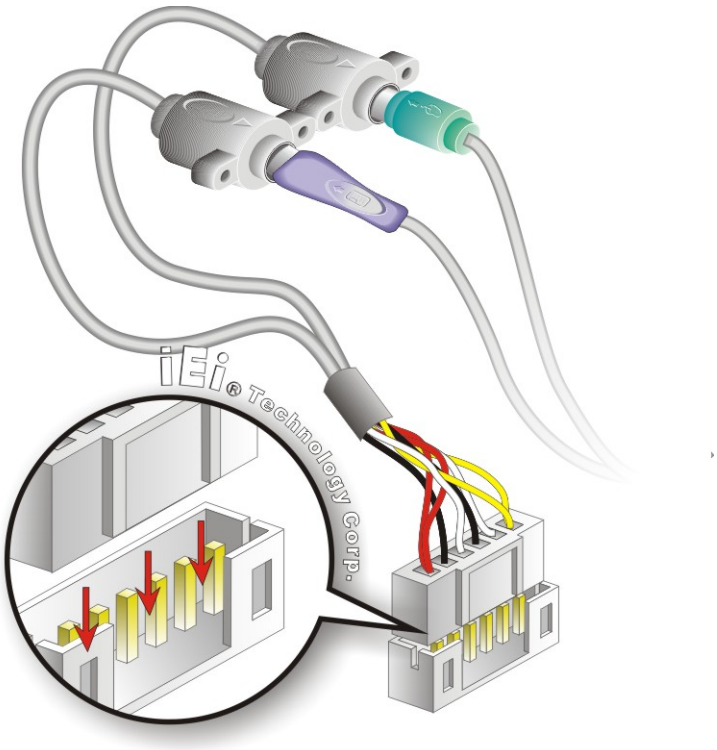

Figure 4-9: Keyboard/mouse Y-cable Connection

Step 4: **Attach PS/2 connectors to the chassis**. The keyboard/mouse Y-cable connector is connected to two PS/2 connectors. To secure the PS/2 connectors to the chassis please refer to the installation instructions that came with the chassis.

Step 5: **Connect the keyboard and mouse**. Once the PS/2 connectors are connected to the chassis, a keyboard and mouse can each be connected to one of the PS/2 connectors. The keyboard PS/2 connector and mouse PS/2 connector are both marked. Please make sure the keyboard and mouse are connected to the correct PS/2 connector.

4.7 External Peripheral Interface Connection

Devices can be connected to the external connectors. To install external devices, follow the directions in the subsections below.

4.7.1 LAN Connection (Single Connector)

There are two external RJ-45 LAN connectors. The RJ-45 connectors enable connection to an external network. To connect a LAN cable with an RJ-45 connector, please follow the instructions below.

Step 6: **Locate the RJ-45 connectors**. The locations of the USB connectors are shown in **Chapter 4**.

Step 7: **Align the connectors.** Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the WAFER-PV-D4251/D5251/N4551. See Figure 4-10.

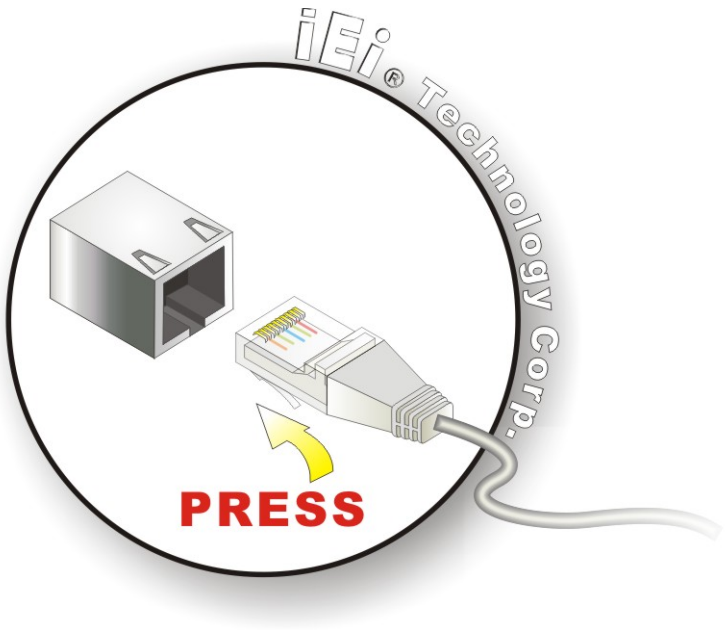

Figure 4-10: LAN Connection

Step 8: **Insert the LAN cable RJ-45 connector.** Once aligned, gently insert the LAN cable RJ-45 connector into the on-board RJ-45 connector.

4.7.2 Serial Device Connection

The WAFER-PV-D4251/D5251/N4551 has a single female DB-9 connector on the external peripheral interface panel for a serial device. Follow the steps below to connect a serial device to the WAFER-PV-D4251/D5251/N4551.

Step 1: **Locate the DB-9 connector**. The location of the DB-9 connector is shown in **Chapter 3**.

Step 2: **Insert the serial connector**. Insert the DB-9 connector of a serial device into the DB-9 connector on the external peripheral interface. See Figure 4-11.

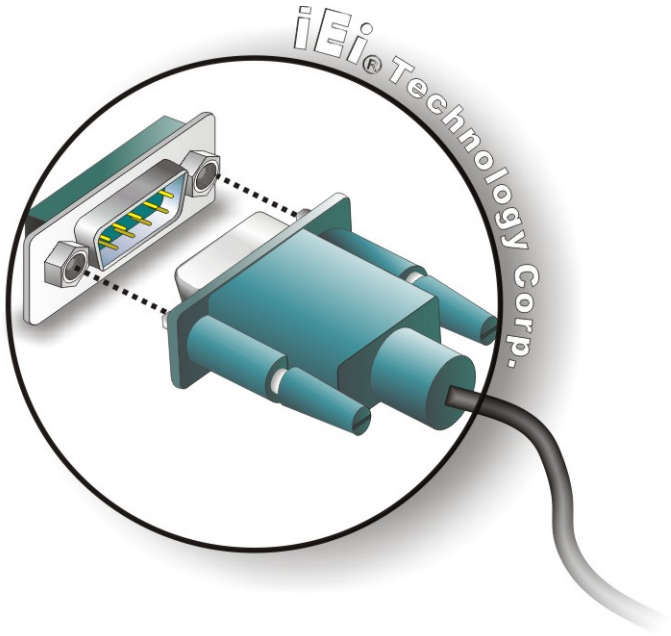

Figure 4-11: Serial Device Connector

Step 3: **Secure the connector**. Secure the serial device connector to the external interface by tightening the two retention screws on either side of the connector.

4.7.3 USB Connection (Dual Connector)

The external USB Series "A" receptacle connectors provide easier and quicker access to external USB devices. Follow the steps below to connect USB devices to the WAFER-PV-D4251/D5251/N4551.

Step 1: **Locate the USB Series "A" receptacle connectors**. The location of the USB Series "A" receptacle connectors are shown in **Chapter 3**.

Step 2: **Insert a USB Series "A" plug**. Insert the USB Series "A" plug of a device into the USB Series "A" receptacle on the external peripheral interface. See Figure 4-12.

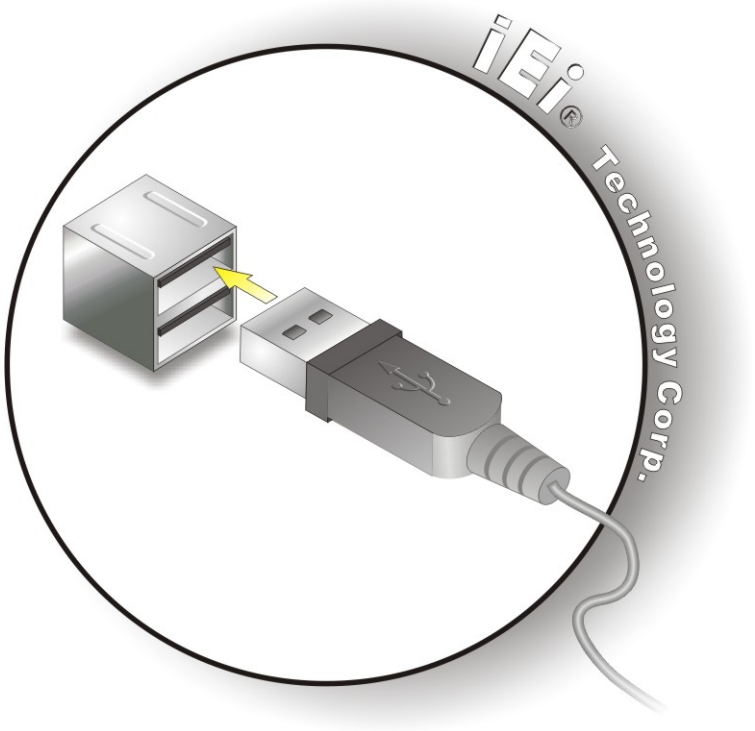

Figure 4-12: USB Connector

4.7.4 VGA Monitor Connection

The WAFER-PV-D4251/D5251/N4551 has a single female DB-15 connector on the external peripheral interface panel. The DB-15 connector is connected to a CRT or VGA monitor. To connect a monitor to the WAFER-PV-D4251/D5251/N4551, please follow the instructions below.

Step 1: **Locate the female DB-15 connector**. The location of the female DB-15 connector is shown in **Chapter 3**.

Step 2: **Align the VGA connector**. Align the male DB-15 connector on the VGA screen cable with the female DB-15 connector on the external peripheral interface.

Step 3: **Insert the VGA connector** Once the connectors are properly aligned with the insert the male connector from the VGA screen into the female connector on the WAFER-PV-D4251/D5251/N4551. See Figure 4-13.

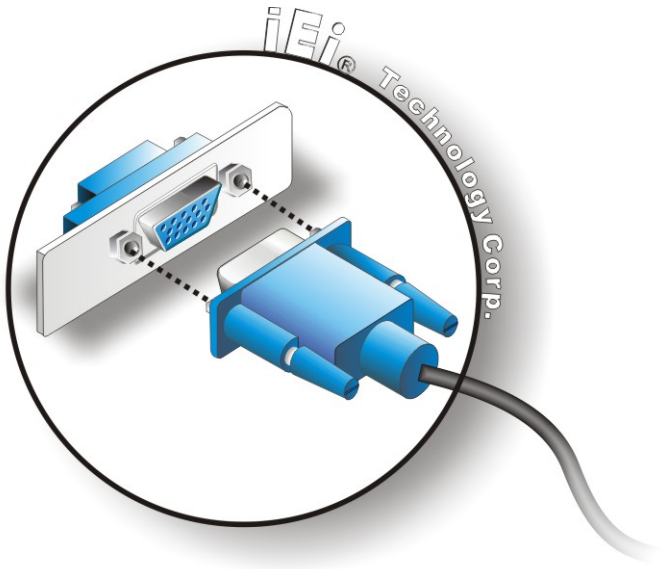

Figure 4-13: VGA Connector

Step 4: **Secure the connector**. Secure the DB-15 VGA connector from the VGA monitor to the external interface by tightening the two retention screws on either side of the connector.

4.8 Software Installation

All the drivers for the WAFER-PV-D4251/D5251/N4551 are on the CD that came with the system. To install the drivers, please follow the steps below.

Step 1: Insert the CD into a CD drive connected to the system.

NOTE:

If the installation program doesn't start automatically:

Click "Start->My Computer->CD Drive->autorun.exe"

Step 2: The driver main menu appears (Figure 4-14).

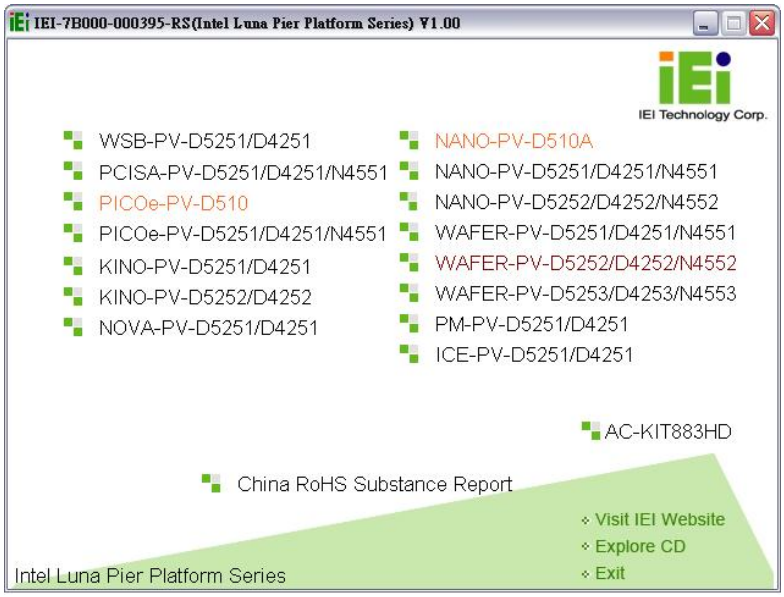

Figure 4-14: Introduction Screen

Step 3: Click WAFER-PV-D4251/D5251/N4551.

Step 4: A new screen with a list of available drivers appears (Figure 4-15).

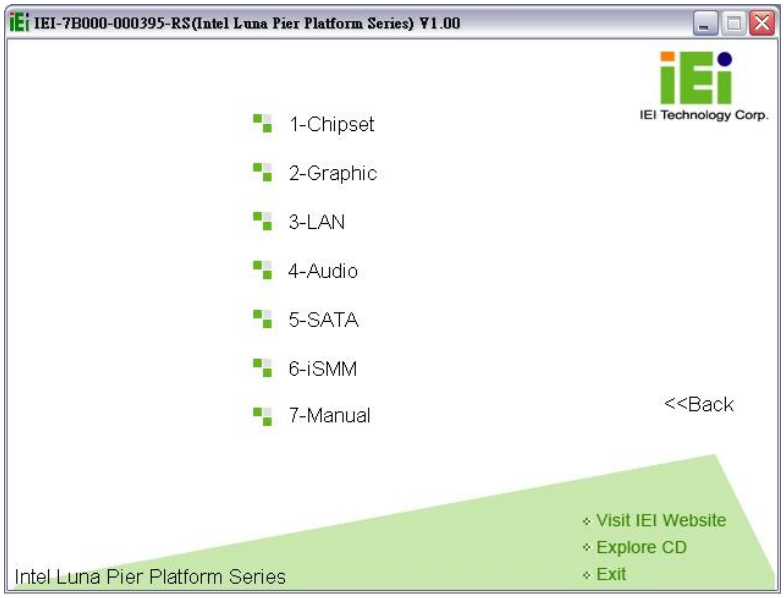

Figure 4-15: Available Drivers

Step 5: Install all of the necessary drivers in this menu.

Chapter

5

BIOS

5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.

5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **F2** key as soon as the system is turned on or
2. Press the **F2** key when the "**Press F2 to enter SETUP**" message appears on the screen.

If the message disappears before the **F2** key is pressed, restart the computer and try again.

5.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **ESC** to quit. Navigation keys are shown in.

Key	Function
Up arrow	Move to the item above
Down arrow	Move to the item below
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page up	Move to the next page
Page down	Move to the previous page

Key	Function
Esc	Main Menu – Quit and do not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F9	Load optimized defaults
F10	Save changes and Exit BIOS

Table 5-1: BIOS Navigation Keys

5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

5.1.4 Unable to Reboot After Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the jumper described in Chapter **4**.

5.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Boot – Changes the system boot configuration.
- Security – Sets User and Supervisor Passwords.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

5.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.

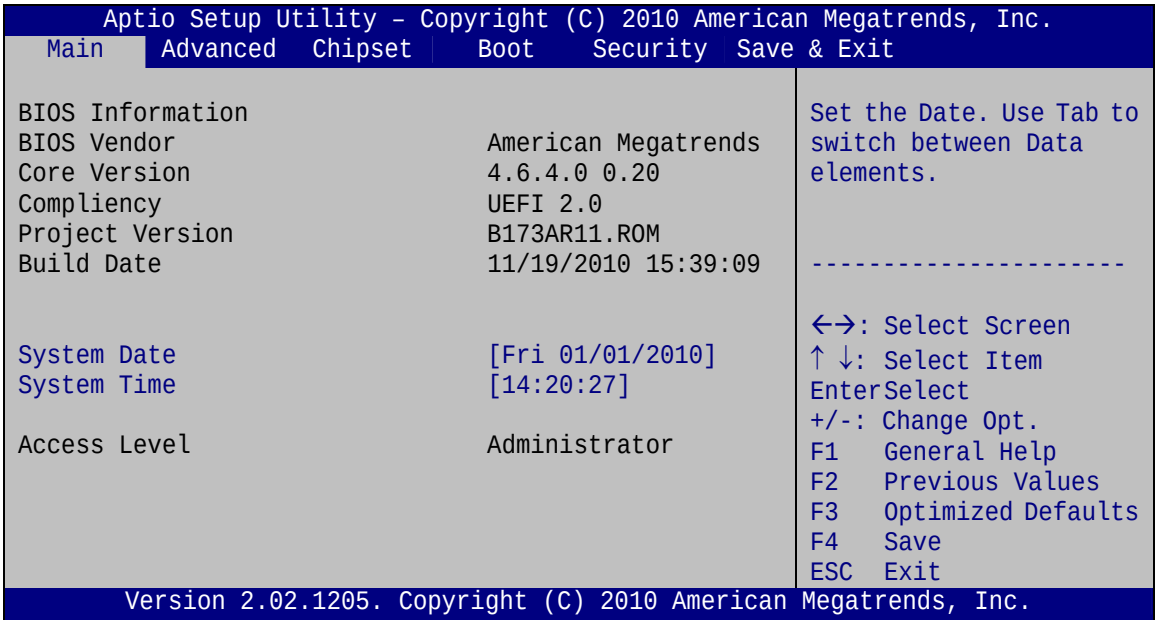
Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc.
Main Advanced Chipset Boot Security Save & Exit
BIOS Information
BIOS Vendor American Megatrends
Core Version 4.6.4.0 0.20
Compliency UEFI 2.0
Project Version B173AR11.ROM
Build Date 11/19/2010 15:39:09
System Date [Fri 01/01/2010]
System Time [14:20:27]
Access Level Administrator
Set the Date. Use Tab to switch between Data elements.
←→: Select Screen
↑ ↓: Select Item
Enter Select
+/-: Change Opt.
F1 General Help
F2 Previous Values
F3 Optimized Defaults
F4 Save
ESC Exit
Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.

BIOS Menu 1: Main

➔ **BIOS Information**

The **BIOS Information** lists a brief summary of the BIOS. The fields in **BIOS Information** cannot be changed. The items shown in the system overview include:

- **BIOS Vendor:** Installed BIOS vendor
- **Core Version:** Current BIOS version
- **Project Version:** the board version
- **Build Date:** Date the current BIOS version was made

The System Overview field also has two user configurable fields:

➔ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

➔ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:

WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

```
      Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc.
  Main   Advanced  Chipset   Boot   Security  Save & Exit

> ACPI Settings                          System ACPI Parameters
> CPU Configuration
> IDE Configuration
> USB Configuration
> Super IO Configuration                 ----------------------
> H/W Monitor
> Serial Port Console Redirection        ←→: Select Screen
                                         ↑ ↓: Select Item
                                         EnterSelect
                                         +/-: Change Opt.
                                         F1   General Help
                                         F2   Previous Values
                                         F3   Optimized Defaults
                                         F4   Save
                                         ESC  Exit
      Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.
```

BIOS Menu 2: Advanced

5.3.1 ACPI Configuration

The **ACPI Configuration** menu (**BIOS Menu 3**) configures the Advanced Configuration and Power Interface (ACPI) options.

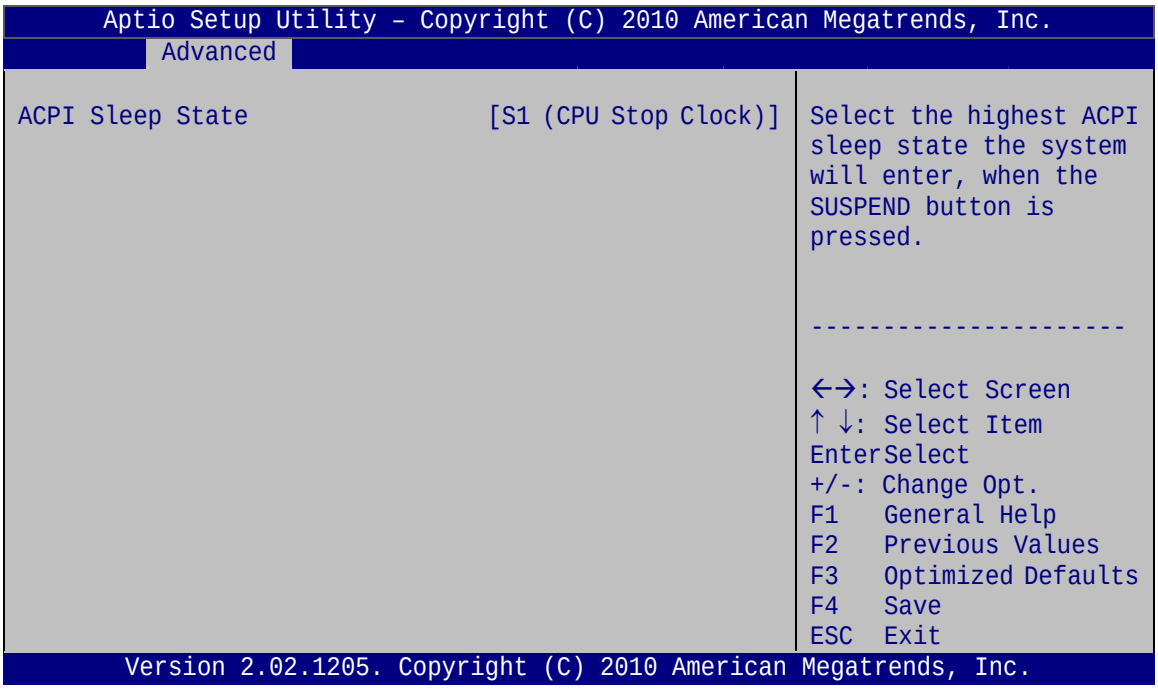
Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc.
Advanced
ACPI Sleep State [S1 (CPU Stop Clock)]
Select the highest ACPI sleep state the system will enter, when the SUSPEND button is pressed.
←→: Select Screen
↑ ↓: Select Item
Enter Select
+/-: Change Opt.
F1 General Help
F2 Previous Values
F3 Optimized Defaults
F4 Save
ESC Exit
Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.

BIOS Menu 3: ACPI Configuration

➔ **ACPI Sleep State [S1 (CPU Stop Clock)]**

Use the **ACPI Sleep State** option to specify the sleep state the system enters when it is not being used.

➔ **S1 (CPU Stop Clock)** **DEFAULT** The system enters S1(POS) sleep state. The system appears off. The CPU is stopped; RAM is refreshed; the system is running in a low power mode.

➔ **S3 (Suspend to RAM)** The caches are flushed and the CPU is powered off. Power to the RAM is maintained. The computer returns slower to a working state, but more power is saved.

5.3.2 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 4**) to view detailed CPU specifications and configure the CPU.

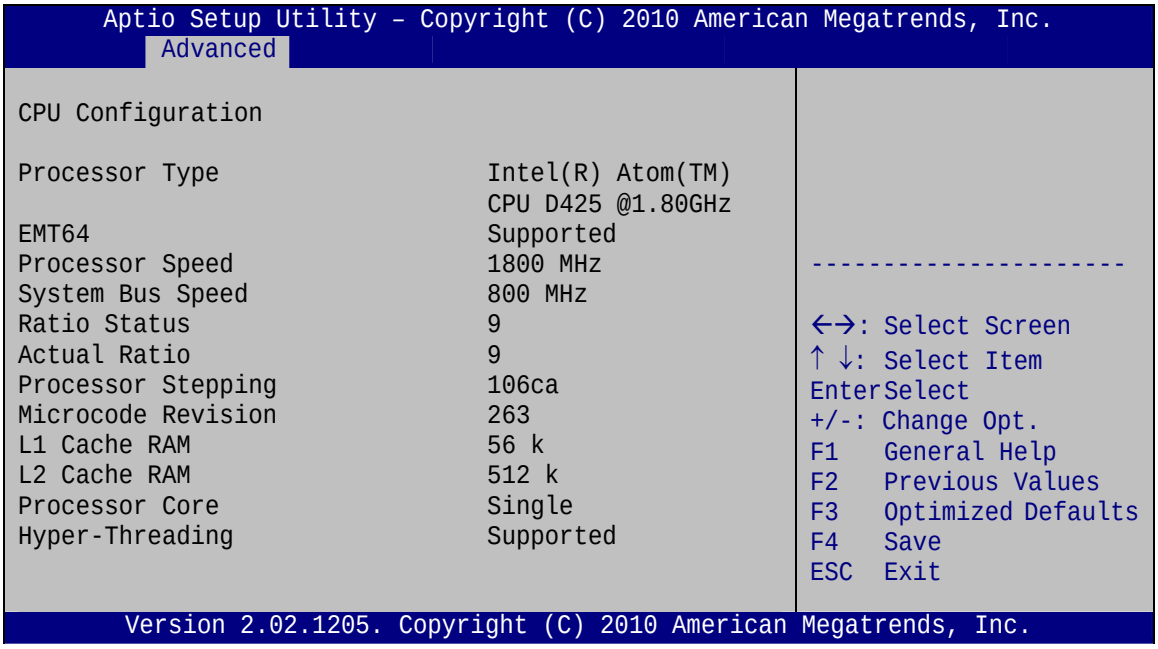

BIOS Menu 4: CPU Configuration

The CPU Configuration menu (**BIOS Menu 4**) lists the following CPU details:

- Processor Type: Lists the brand name of the CPU being used
- EMT64: Indicates if the EM64T is supported by the CPU.
- Processor Speed: Lists the CPU processing speed
- Actual Ratio: Lists the ratio of the frequency to the clock speed
- Processor Stepping: Lists the CPU processing stepping
- Microcode Revision: Lists the microcode revision
- L1 Cache RAM: Lists the CPU L1 cache size
- L2 Cache RAM: Lists the CPU L2 cache size
- Processor Cores: Lists the number of the processor core
- Hyper-Threading: Indicates if the Intel HT Technology is supported by the CPU.

5.3.3 IDE Configuration

Use the **IDE Configuration** menu (**BIOS Menu 5**) to change and/or set the configuration of the IDE devices installed in the system.

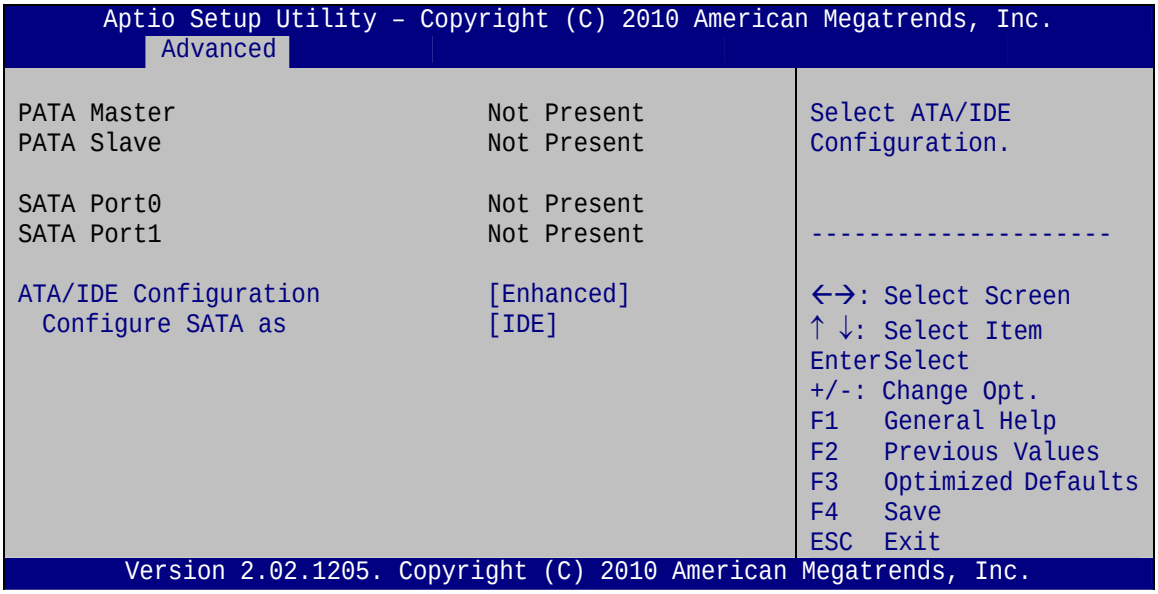

BIOS Menu 5: IDE Configuration

➔ **ATA/IDE Configurations [Enhanced]**

Use the **ATA/IDE Configurations** option to configure the ATA/IDE controller.

➔ **Disabled** Disables the on-board ATA/IDE controller.

➔ **Compatible** Configures the on-board ATA/IDE controller to be in compatible mode. In this mode, a SATA channel will replace one of the IDE channels. This mode supports up to 4 storage devices.

➔ **Enhanced** **DEFAULT** Configures the on-board ATA/IDE controller to be in Enhanced mode. In this mode, IDE channels and SATA channels are separated. This mode supports up to 6 storage devices. Some legacy OS do not support this mode.

➔ **Configure SATA as [IDE]**

Use the **Configure SATA as** option to configure SATA devices as normal IDE devices.

➔ **IDE** **DEFAULT** Configures SATA devices as normal IDE device.

➔ **AHCI** Configures SATA devices as normal AHCI device.

5.3.4 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 6**) to read USB configuration information and configure the USB settings.

```
Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc.
        Advanced
USB Configuration                                  Enable / Disable USB
                                                   Function.
USB Devices:
      1 Keyboard                                   ---------------------
                                                   ←→: Select Screen
USB Function                        [Enabled]      ↑ ↓: Select Item
USB 2.0(EHCI) Support               [Enabled]      EnterSelect
Legacy USB Support                  [Enabled]      +/-: Change Opt.
                                                   F1   General Help
                                                   F2   Previous Values
                                                   F3   Optimized Defaults
                                                   F4   Save
                                                   ESC  Exit
        Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.
```

BIOS Menu 6: USB Configuration

➔ **USB Devices**

The **USB Devices Enabled** field lists the USB devices that are enabled on the system

➔ **USB Function**

Use the **USB Function** BIOS option to enable or disable USB function support.

➔ **Enabled** **DEFAULT** USB function support enabled.

➔ **Disabled** USB function support disabled.

➔ **USB 2.0 (EHCI) Support**

Use the **USB 2.0 (EHCI) Support** BIOS option to enable or disable the USB 2.0 controller.

➔ **Enabled**	**DEFAULT**	USB 2.0 controller enabled
➔ **Disabled**		USB 2.0 controller disabled

➔ **Legacy USB Support [Enabled]**

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support. Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

➔ **Enabled**	**DEFAULT**	Legacy USB support enabled
➔ **Disabled**		Legacy USB support disabled
➔ **Auto**		Legacy USB support disabled if no USB devices are connected

5.3.5 Super IO Configuration

Use the **Super IO Configuration** menu (**BIOS Menu 7**) to set or change the configurations for the FDD controllers, parallel ports and serial ports.

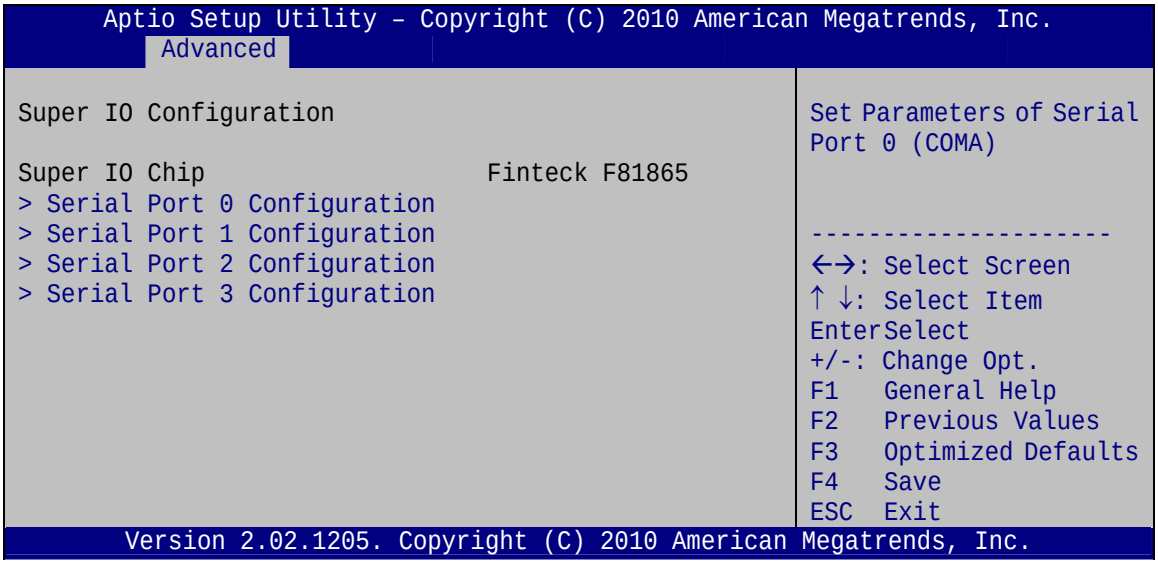
Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc.
Advanced
Super IO Configuration
Super IO Chip Finteck F81865
> Serial Port 0 Configuration
> Serial Port 1 Configuration
> Serial Port 2 Configuration
> Serial Port 3 Configuration
Set Parameters of Serial Port 0 (COMA)
←→: Select Screen
↑ ↓: Select Item
Enter Select
+/-: Change Opt.
F1 General Help
F2 Previous Values
F3 Optimized Defaults
F4 Save
ESC Exit
Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.

BIOS Menu 7: Super IO Configuration

5.3.5.1 Serial Port n Configuration

Use the **Serial Port n Configuration** menu (**BIOS Menu 8**) to configure the serial port n.

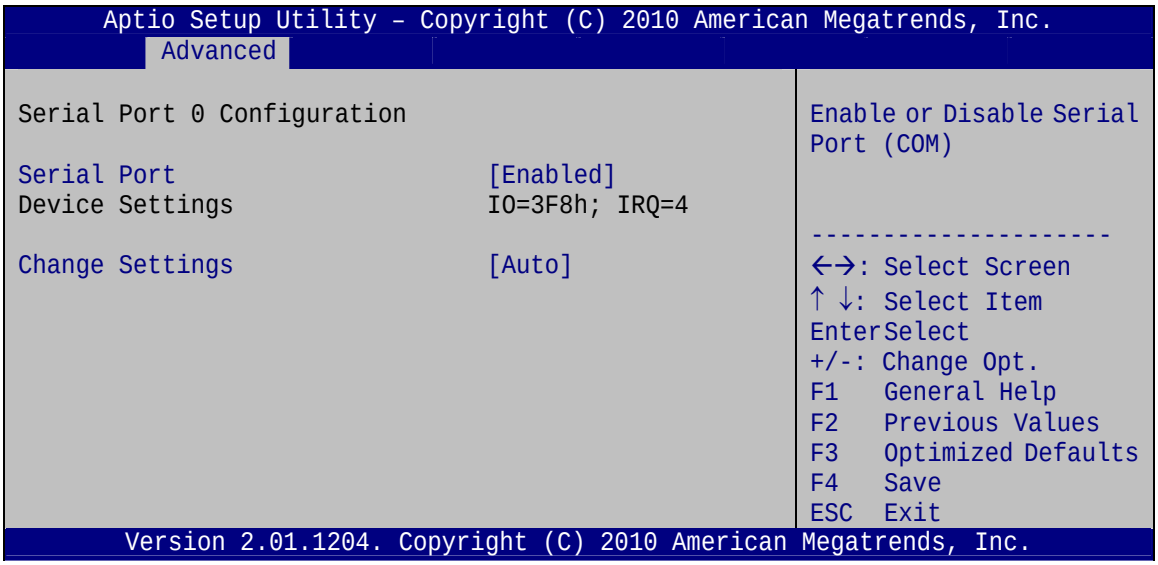

BIOS Menu 8: Serial Port n Configuration Menu

5.3.5.1.1 Serial Port 0 Configuration

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

➔ **Disabled**		Disable the serial port
➔ **Enabled**	**DEFAULT**	Enable the serial port

➔ **Change Settings [Auto]**

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

➔ **Auto**	**DEFAULT**	The serial port IO port address and interrupt address are automatically detected.
➔ **IO=3F8h; IRQ=4**		Serial Port I/O port address is 3F8h and the interrupt address is IRQ4
➔ **IO=3F8h; IRQ=3, 4**		Serial Port I/O port address is 3E8h and the interrupt address is IRQ3, 4
➔ **IO=2F8h; IRQ=3, 4**		Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4
➔ **IO=2C0h; IRQ=3, 4**		Serial Port I/O port address is 2C0h and the interrupt address is IRQ3, 4
➔ **IO=2C8h; IRQ=3, 4**		Serial Port I/O port address is 2C8h and the interrupt address is IRQ3, 4

5.3.5.1.2 Serial Port 1 Configuration

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

➔ **Disabled**		Disable the serial port

➔ **Enabled** **DEFAULT** Enable the serial port

➔ **Change Settings [Auto]**

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

➔ **Auto** **DEFAULT** The serial port IO port address and interrupt address are automatically detected.

➔ **IO=2F8h; IRQ=3** Serial Port I/O port address is 2F8h and the interrupt address is IRQ3

➔ **IO=3F8h; IRQ=3, 4** Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4

➔ **IO=2F8h; IRQ=3, 4** Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4

➔ **IO=2C0h; IRQ=3, 4** Serial Port I/O port address is 2C0h and the interrupt address is IRQ3, 4

➔ **IO=2C8h; IRQ=3, 4** Serial Port I/O port address is 2C8h and the interrupt address is IRQ3, 4

5.3.5.1.3 Serial Port 2 Configuration

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

➔ **Disabled** Disable the serial port

➔ **Enabled** **DEFAULT** Enable the serial port

➔ **Change Settings [Auto]**

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **Auto** **DEFAULT** The serial port IO port address and interrupt address are automatically detected.
- **IO=3E8h; IRQ=11** Serial Port I/O port address is 3E8h and the interrupt address is IRQ11
- **IO=3E8h; IRQ=10, 11** Serial Port I/O port address is 3E8h and the interrupt address is IRQ10, 11
- **IO=2E8h; IRQ=10, 11** Serial Port I/O port address is 2E8h and the interrupt address is IRQ10, 11
- **IO=2D0h; IRQ=10, 11** Serial Port I/O port address is 2D0h and the interrupt address is IRQ10, 11
- **IO=2D8h; IRQ=10, 11** Serial Port I/O port address is 2D8h and the interrupt address is IRQ10, 11

5.3.5.1.4 Serial Port 3 Configuration

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

➔ **Change Settings [Auto]**

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **Auto** **DEFAULT** The serial port IO port address and interrupt address are automatically detected.
- **IO=2E8h; IRQ=11** Serial Port I/O port address is 2E8h and the interrupt address is IRQ11

➔ **IO=3E8h; IRQ=10, 11**	Serial Port I/O port address is 3E8h and the interrupt address is IRQ10, 11
➔ **IO=2E8h; IRQ=10, 11**	Serial Port I/O port address is 2E8h and the interrupt address is IRQ10, 11
➔ **IO=2D0h; IRQ=10, 11**	Serial Port I/O port address is 2D0h and the interrupt address is IRQ10, 11
➔ **IO=2D8h; IRQ=10, 11**	Serial Port I/O port address is 2E8h and the interrupt address is IRQ10, 11

5.3.6 H/W Monitor

The H/W Monitor menu (**BIOS Menu 9**) shows the operating temperature, fan speeds and system voltages.

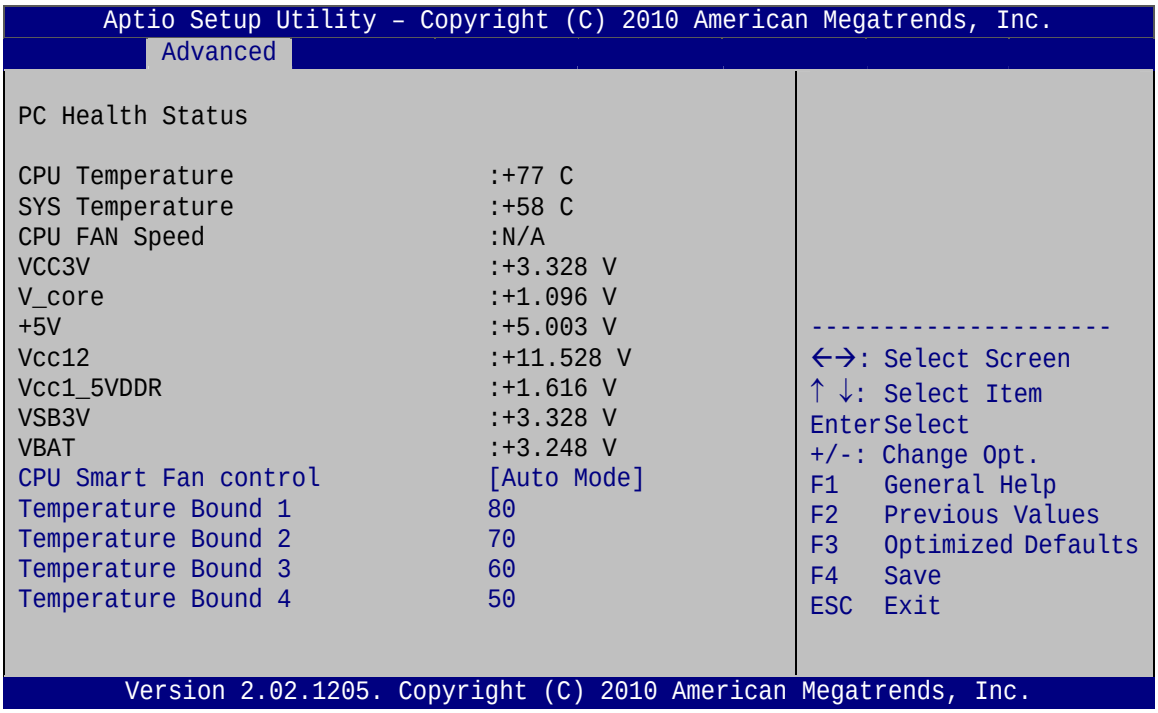

BIOS Menu 9: Hardware Health Configuration

➔ **PC Health Status**

The following system parameters and values are shown. The system parameters that are monitored are:

- System Temperatures:
  - CPU Temperature
  - System Temperature
- Fan Speeds:
  - CPU Fan Speed
- Voltages:
  - VCC3V
  - V_core
  - +5V
  - Vcc12
  - Vcc1_5VDDR
  - VSB3V
  - VBAT

➔ **CPU Smart Fan control [Auto Mode]**

Use the **CPU Smart Fan control** option to configure the CPU fan.

➔ **Auto Mode**	The fan adjusts its speed using these settings: Temperature Bound 1 Temperature Bound 2 Temperature Bound 3 Temperature Bound 4
➔ **Manual Mode**	The fan spins at the speed set in: Manual Duty Cycle Setting

5.3.7 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 10**) allows the console redirection options to be configured. Console redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

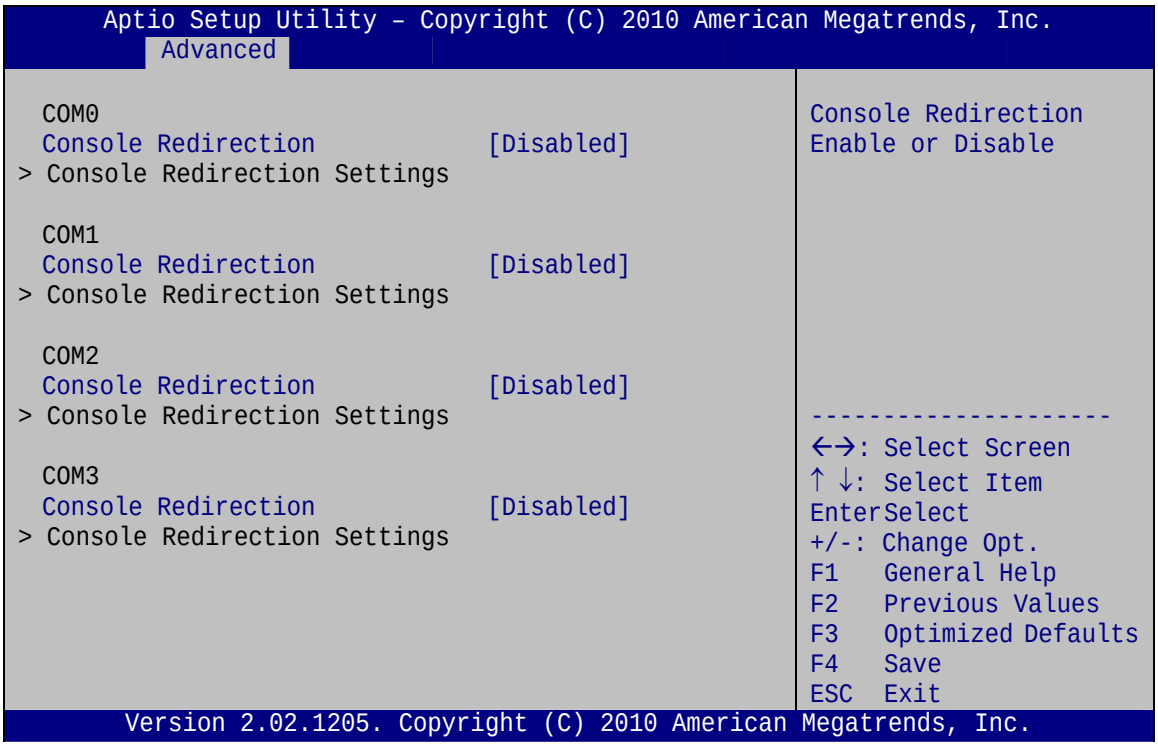

BIOS Menu 10: Serial Port Console Redirection

➔ **Console Redirection [Disabled]**

Use **Console Redirection** option to enable or disable the console redirection function.

➔	**Disabled**	**DEFAULT**	Disabled the console redirection function
➔	**Enabled**		Enabled the console redirection function

5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 11**) to access the Northbridge and Southbridge configuration menus

WARNING!

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

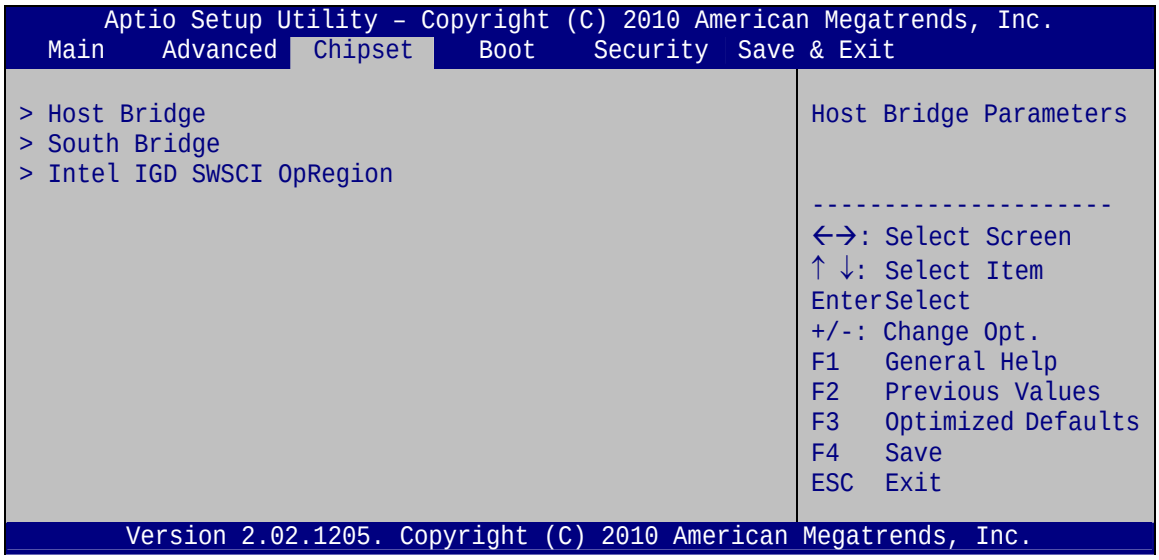
Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc.
Main Advanced Chipset Boot Security Save & Exit
> Host Bridge
> South Bridge
> Intel IGD SWSCI OpRegion
Host Bridge Parameters
←→: Select Screen
↑ ↓: Select Item
Enter Select
+/-: Change Opt.
F1 General Help
F2 Previous Values
F3 Optimized Defaults
F4 Save
ESC Exit
Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.

BIOS Menu 11: Chipset

5.4.1 Host Bridge

Use the **Host Bridge** menu (**BIOS Menu 12**) to configure the host bridge chipset.

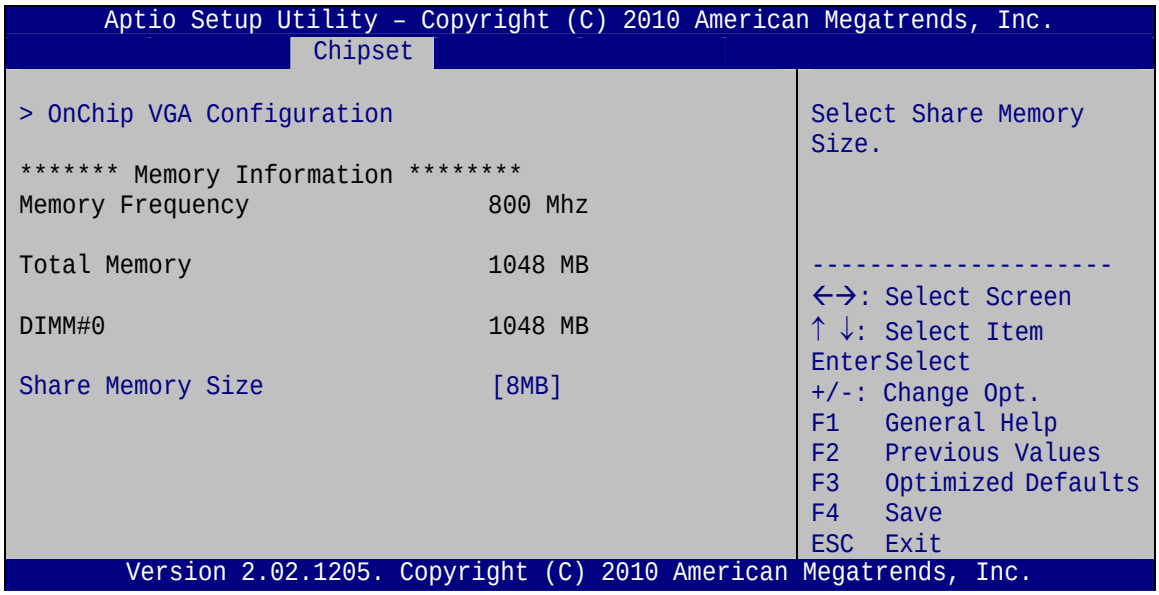

BIOS Menu 12:Host Bridge Configuration

➔ **Share Memory Size [8MB]**

Use the **Share Memory Size** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can

then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:

➔	**Disabled**		Disabled Share Memory.
➔	**1 MB**		Sets the Share Memory size at 1 MB.
➔	**8 MB**	**DEFAULT**	Sets the Share Memory size at 8 MB.

5.4.2 South Bridge

Use the **South Bridge** menu (**BIOS Menu 13**) to configure the Southbridge chipset.

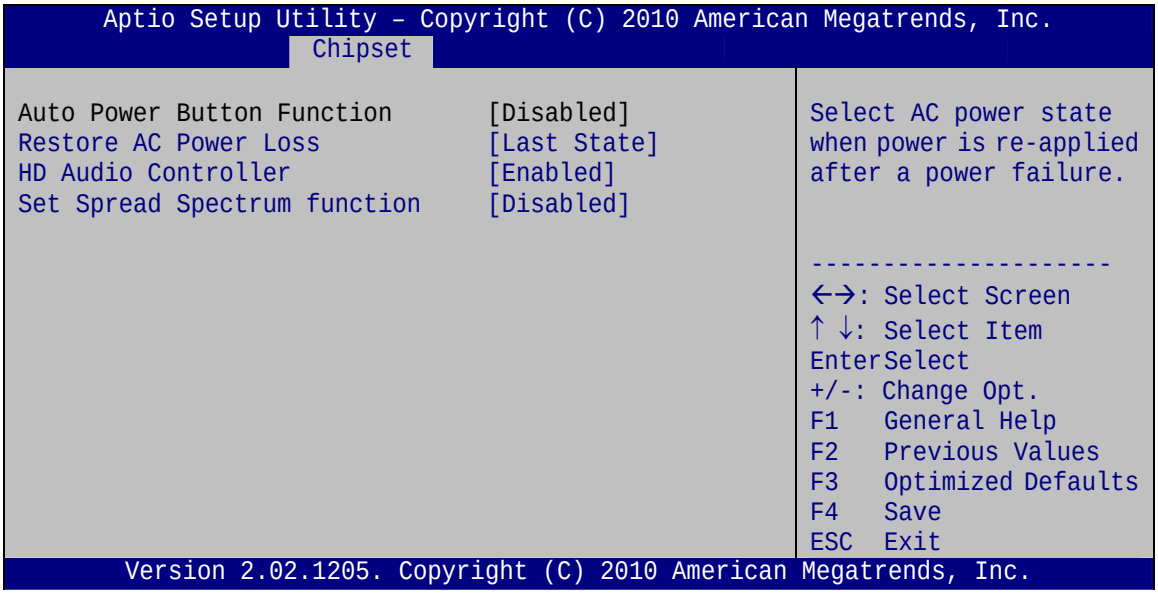
Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc.
Chipset
Auto Power Button Function [Disabled]
Restore AC Power Loss [Last State]
HD Audio Controller [Enabled]
Set Spread Spectrum function [Disabled]
Select AC power state when power is re-applied after a power failure.
←→: Select Screen
↑ ↓: Select Item
Enter Select
+/-: Change Opt.
F1 General Help
F2 Previous Values
F3 Optimized Defaults
F4 Save
ESC Exit
Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.

BIOS Menu 13:Southbridge Chipset Configuration

➔ **Restore on AC Power Loss [Last State]**

Use the **Restore on AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

➔	**Power Off**		The system remains turned off
➔	**Power On**		The system turns on
➔	**Last State**	**DEFAULT**	The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

➔ **HD Audio Controller [Enabled]**

The **HD Audio Controller** option enables or disables the HD audio controller.

➔ **Enabled**	**DEFAULT**	The onboard HD audio controller automatically detected and enabled
➔ **Disabled**		The onboard HD audio controller is disabled

➔ **Set Spread Spectrum Function [Disabled]**

The **Set Spread Spectrum Function** option can help to improve CPU EMI issues.

➔ **Disabled**	**DEFAULT**	The spread spectrum function is disabled
➔ **Enabled**		The spread spectrum function is enabled

5.4.3 Intel IGD SWSCI OpRegion

Use the **Intel IGD SWSCI OpRegion** menu to configure the video device connected to the system.

```
Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc.
        Advanced
Intel IGD SWSCI OpRegion Configuration          Select DVMT/FIXED Mode

DVMT Mode Select                [DVMT Mode]
DVMT/Fixed Memory               [Maximum]       ---------------------
IGD - Boot Type                 [VBIOS Default] ←→: Select Screen
LCD Panel Type                  [1024x768 18bit] ↑ ↓: Select Item
                                                EnterSelect
                                                +/-: Change Opt.
                                                F1   General Help
                                                F2   Previous Values
                                                F3   Optimized Defaults
                                                F4   Save
                                                ESC  Exit
Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.
```

BIOS Menu 14: Intel IGD SWSCI OpRegion

➔ **DVMT Mode Select [DVMT Mode]**

Use the **DVMT Mode Select** option to select the Intel Dynamic Video Memory Technology (DVMT) operating mode.

➔ **Fixed Mode** A fixed portion of graphics memory is reserved as graphics memory.

➔ **DVMT Mode** **DEFAULT** Graphics memory is dynamically allocated according to the system and graphics needs.

➔ **DVMT/FIXED Memory [256 MB]**

Use the **DVMT/FIXED Memory** option to specify the maximum amount of memory that can be allocated as graphics memory. Configuration options are listed below.

- 128 MB
- 256 MB
- Maximum **Default**

➔ **IGD - Boot Type [VBIOS Default]**

Use the **IGD - Boot Type** option to select the display device used by the system when it boots. Configuration options are listed below.

- VBIOS Default **DEFAULT**
- CRT
- LFP
- CRT + LFP

➔ **LCD Panel Type [VBIOS Default]**

Use the **LCD Panel Type** option to select the type of flat panel connected to the system. Configuration options are listed below.

- Select by Panel ID
- 640x480 18bit
- 800x480 18bit
- 800x600 18bit

- 1024x768 18bit **DEFAULT**
- 1280x1024 18bit
- 1366x768 18bit
- 1280x800 18bit
- 1280x600 18bit

5.5 Boot

Use the **Boot** menu (**BIOS Menu 15**) to configure system boot options.

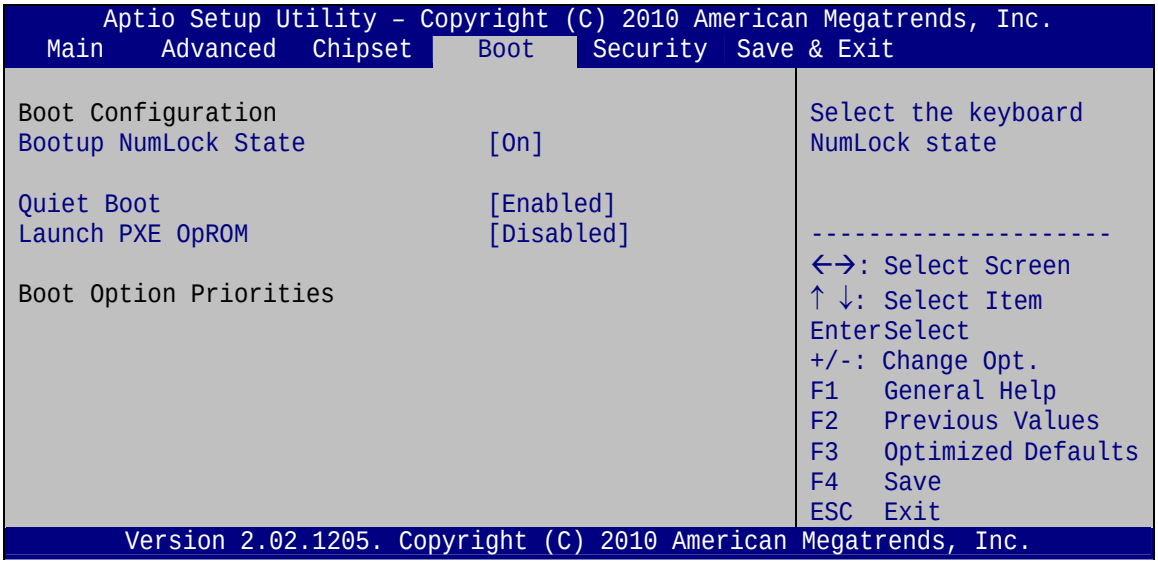
Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc.
Main Advanced Chipset Boot Security Save & Exit
Boot Configuration
Bootup NumLock State [On]
Quiet Boot [Enabled]
Launch PXE OpROM [Disabled]
Boot Option Priorities
Select the keyboard NumLock state
←→: Select Screen
↑ ↓: Select Item
Enter Select
+/-: Change Opt.
F1 General Help
F2 Previous Values
F3 Optimized Defaults
F4 Save
ESC Exit
Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.

BIOS Menu 15: Boot

➔ **Bootup NumLock State [On]**

Use the **Bootup NumLock State** BIOS option to specify if the number lock setting must be modified during boot up.

➔ **On** **DEFAULT** Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.

➔ **Off** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.

➔ **Quiet Boot [Enabled]**

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

➔ **Disabled** Normal POST messages displayed

➔ **Enabled** **DEFAULT** OEM Logo displayed instead of POST messages

➔ **Launch PXE OpROM [Disabled]**

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

➔ **Disabled** **DEFAULT** Ignore all PXE Option ROMs

➔ **Enabled** Load PXE Option ROMs.

5.6 Security

Use the **Security** menu (**BIOS Menu 16**) to set system and user passwords.

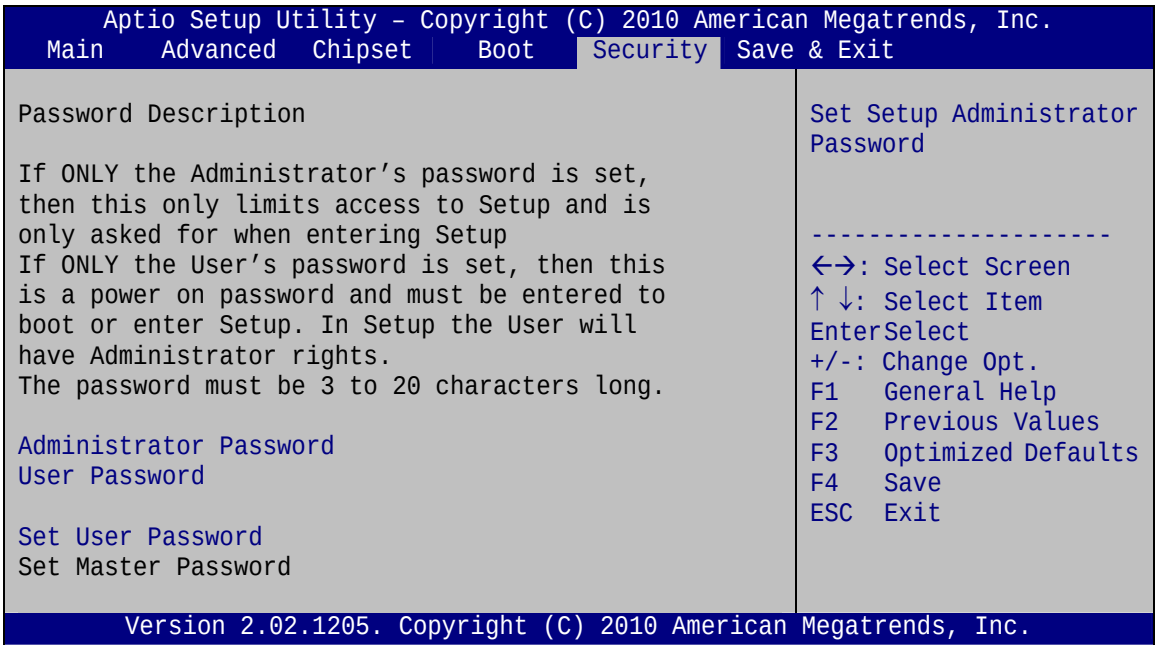
Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc.
Main Advanced Chipset Boot Security Save & Exit
Password Description
If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup
If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights.
The password must be 3 to 20 characters long.
Administrator Password
User Password
Set User Password
Set Master Password
Set Setup Administrator Password
←→: Select Screen
↑ ↓: Select Item
Enter Select
+/-: Change Opt.
F1 General Help
F2 Previous Values
F3 Optimized Defaults
F4 Save
ESC Exit
Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.

BIOS Menu 16: Security

➔ **Administrator Password**

Use the **Administrator Password** to set or change an administrator password.

➔ **User Password**

Use the **User Password** to set or change a user password.

5.7 Exit

Use the **Exit** menu (**BIOS Menu 17**) to load default BIOS values, optimal failsafe values and to save configuration changes.

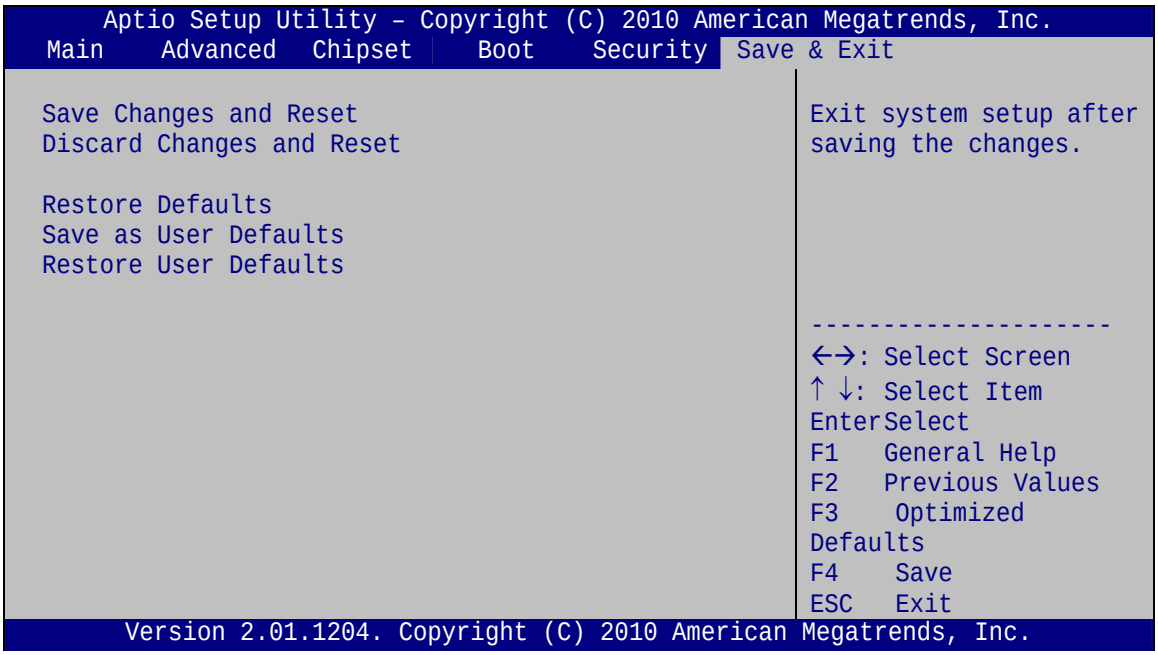
Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc.
Main Advanced Chipset Boot Security Save & Exit
Save Changes and Reset
Discard Changes and Reset
Restore Defaults
Save as User Defaults
Restore User Defaults
Exit system setup after saving the changes.
←→: Select Screen
↑ ↓: Select Item
Enter Select
F1 General Help
F2 Previous Values
F3 Optimized Defaults
F4 Save
ESC Exit
Version 2.01.1204. Copyright (C) 2010 American Megatrends, Inc.

BIOS Menu 17:Exit

➔ **Save Changes and Reset**

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and to exit the BIOS configuration setup program.

➔ **Discard Changes and Reset**

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

➔ **Restore Defaults**

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

➔ **Save as User Defaults**

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

➔ **Restore User Defaults**

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Appendix

A

BIOS Options

Below is a list of BIOS configuration options in the BIOS chapter.

BIOS Information 57
System Date [xx/xx/xx] 57
System Time [xx:xx:xx] 58
ACPI Sleep State [S1 (CPU Stop Clock)] 59
ATA/IDE Configurations [Enhanced] 61
Configure SATA as [IDE] 62
USB Devices 62
USB Function 62
USB 2.0 (EHCI) Support 63
Legacy USB Support [Enabled] 63
Serial Port [Enabled] 65
Change Settings [Auto] 65
Serial Port [Enabled] 65
Change Settings [Auto] 66
Serial Port [Enabled] 66
Change Settings [Auto] 66
Serial Port [Enabled] 67
Change Settings [Auto] 67
PC Health Status 68
CPU Smart Fan control [Auto Mode] 69
Console Redirection [Disabled] 70
Share Memory Size [8MB] 71
Restore on AC Power Loss [Last State] 72
HD Audio Controller [Enabled] 73
Set Spread Spectrum Function [Disabled] 73
DVMT Mode Select [DVMT Mode] 74
DVMT/FIXED Memory [256 MB] 74
IGD - Boot Type [VBIOS Default] 74
LCD Panel Type [VBIOS Default] 74
Bootup NumLock State [On] 75
Quiet Boot [Enabled] 76
Launch PXE OpROM [Disabled] 76
Administrator Password 77

User Password 77
Save Changes and Reset 78
Discard Changes and Reset 78
Restore Defaults 78
Save as User Defaults 78
Restore User Defaults 78

Appendix

B

One Key Recovery

B.1 One Key Recovery Introduction

The IEI one key recovery is an easy-to-use front end for the Norton Ghost system backup and recovery tool. The one key recovery provides quick and easy shortcuts for creating a backup and reverting to that backup or for reverting to the factory default settings.

The IEI One Key Recovery tool menu is shown below.

Figure B-1: IEI One Key Recovery Tool Menu

Prior to using the IEI One Key Recovery tool (as shown in **Figure B-1**) to backup or restore Windows system, five setup procedures are required.

1. Hardware and BIOS setup (see **Section B.2.1**)
2. Create partitions (see **Section B.2.2**)
3. Install operating system, drivers and system applications (see **Section B.2.3**)
4. Build-up recovery partition (see **Section B.2.4**)
5. Create factory default image (see **Section B.2.5**)

After completing the five initial setup procedures as described above, users can access the recovery tool by pressing <**F3**> while booting up the system. The detailed information of each function is described in **Section B.4**.

NOTE:

The initial setup procedures for Linux system are described in **Section B.3**.

B.1.1 System Requirement

NOTE:

The recovery CD can only be used with IEI products. The software will fail to run and a warning message will appear when used on non-IEI hardware.

To create the system backup, the main storage device must be split into two partitions (three partitions for Linux). The first partition will be for the operating system, while the second partition will be invisible to the operating system and contain the backup made by the one key recovery software.

The partition created for recovery images must be big enough to contain both the factory default image and the user backup image. The size must be calculated before creating the partitions. Please take the following table as a reference when calculating the size of the partition.

	OS	OS Image after Ghost	Compression Ratio
Windows® 7	7 GB	5 GB	70%
Windows® XPE	776 MB	560 MB	70%
Windows® CE 6.0	36 MB	28 MB	77%

NOTE:

Specialized tools are required to change the partition size if the operating system is already installed.

B.1.2 Supported Operating System

The recovery CD is compatible with both Microsoft Windows and Linux operating system (OS). The supported OS versions are listed below.

- Microsoft Windows
  - Windows XP (Service Pack 2 or 3 required)
  - Windows Vista
  - Windows 7
  - Windows CE 5.0
  - Windows CE 6.0
  - Windows XP Embedded
- Linux
  - Fedora Core 12 (Constantine)
  - Fedora Core 11 (Leonidas)
  - Fedora Core 10 (Cambridge)
  - Fedora Core 8 (Werewolf)
  - Fedora Core 7 (Moonshine)
  - RedHat RHEL-5.4
  - RedHat 9 (Ghirke)
  - Ubuntu 8.10 (Intrepid)
  - Ubuntu 7.10 (Gutsy)
  - Ubuntu 6.10 (Edgy)
  - Debian 5.0 (Lenny)
  - Debian 4.0 (Etch)
  - SuSe 11.2
  - SuSe 10.3

NOTE:

Installing unsupported OS versions may cause the recovery tool to fail.

B.2 Setup Procedure for Windows

Prior to using the recovery tool to backup or restore Windows system, a few setup procedures are required.

Step 1: Hardware and BIOS setup (see **Section B.2.1**)

Step 2: Create partitions (see **Section B.2.2**)

Step 3: Install operating system, drivers and system applications (see **Section B.2.3**)

Step 4: Build-up recovery partition (see **Section B.2.4**)

Step 5: Create factory default image (see **Section B.2.5**)

The detailed descriptions are described in the following sections.

NOTE:

The setup procedures described below are for Microsoft Windows operating system users. For Linux system, most setup procedures are the same with Microsoft Windows except for several steps which are described in **Section B.3**.

B.2.1 Hardware and BIOS Setup

Step 1: Make sure the system is powered off and unplugged.

Step 2: Install a hard drive or SSD in the system. An unformatted and unpartitioned disk is recommended.

Step 3: Connect an optical disk drive to the system and insert the recovery CD.

Step 4: Turn on the system.

Step 5: Press the <**DELETE**> key as soon as the system is turned on to enter the BIOS.

Step 6: Select the connected optical disk drive as the 1st boot device. (**Boot → Boot Device Priority → 1st Boot Device**).

Step 7: Save changes and restart the computer. Continue to the next section for instructions on partitioning the internal storage.

B.2.2 Create Partitions

To create the system backup, the main storage device must be split into two partitions (three partitions for Linux). The first partition will be for the operating system, while the second partition will be invisible to the operating system and contain the backup made by the one key recovery software.

Step 1: Put the recovery CD in the optical drive of the system.

Step 2: **Boot the system from recovery CD**. When prompted, press any key to boot from the recovery CD. It will take a while to launch the recovery tool. Please be patient!

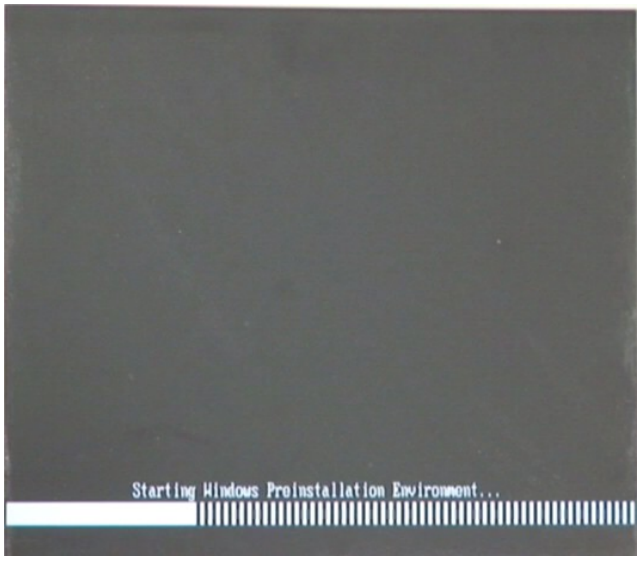

Figure B-2: Launching the Recovery Tool

Step 3: The recovery tool setup menu is shown as below.

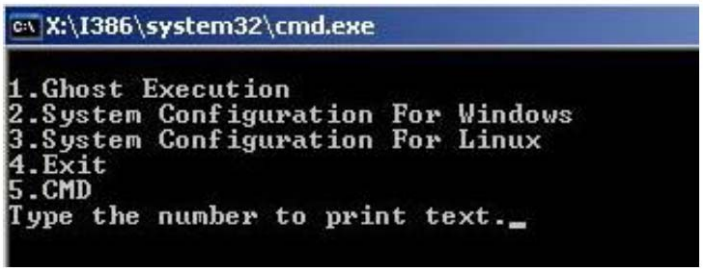

Figure B-3: Recovery Tool Setup Menu

Step 4: Press <**5**> then <Enter>.

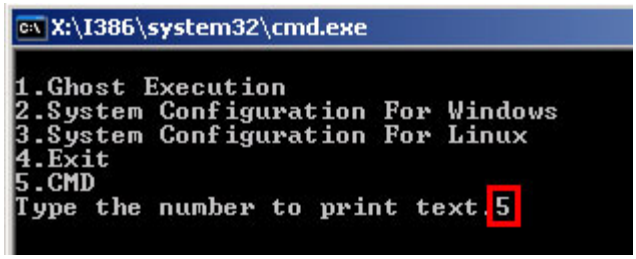

Figure B-4: Command Mode

Step 5: The command prompt window appears. Type the following commands (marked in red) to create two partitions. One is for the OS installation; the other is for saving recovery files and images which will be an invisible partition.

(Press <Enter> after entering each line below)

system32>diskpart

DISKPART>list vol

DISKPART>sel disk 0

DISKPART>create part pri size= ___

DISKPART>assign letter=N

DISKPART>create part pri size= ___

DISKPART>assign letter=F

DISKPART>exit

system32>format N: /fs:ntfs /q /y

system32>format F: /fs:ntfs /q /v:Recovery /y

system32>exit

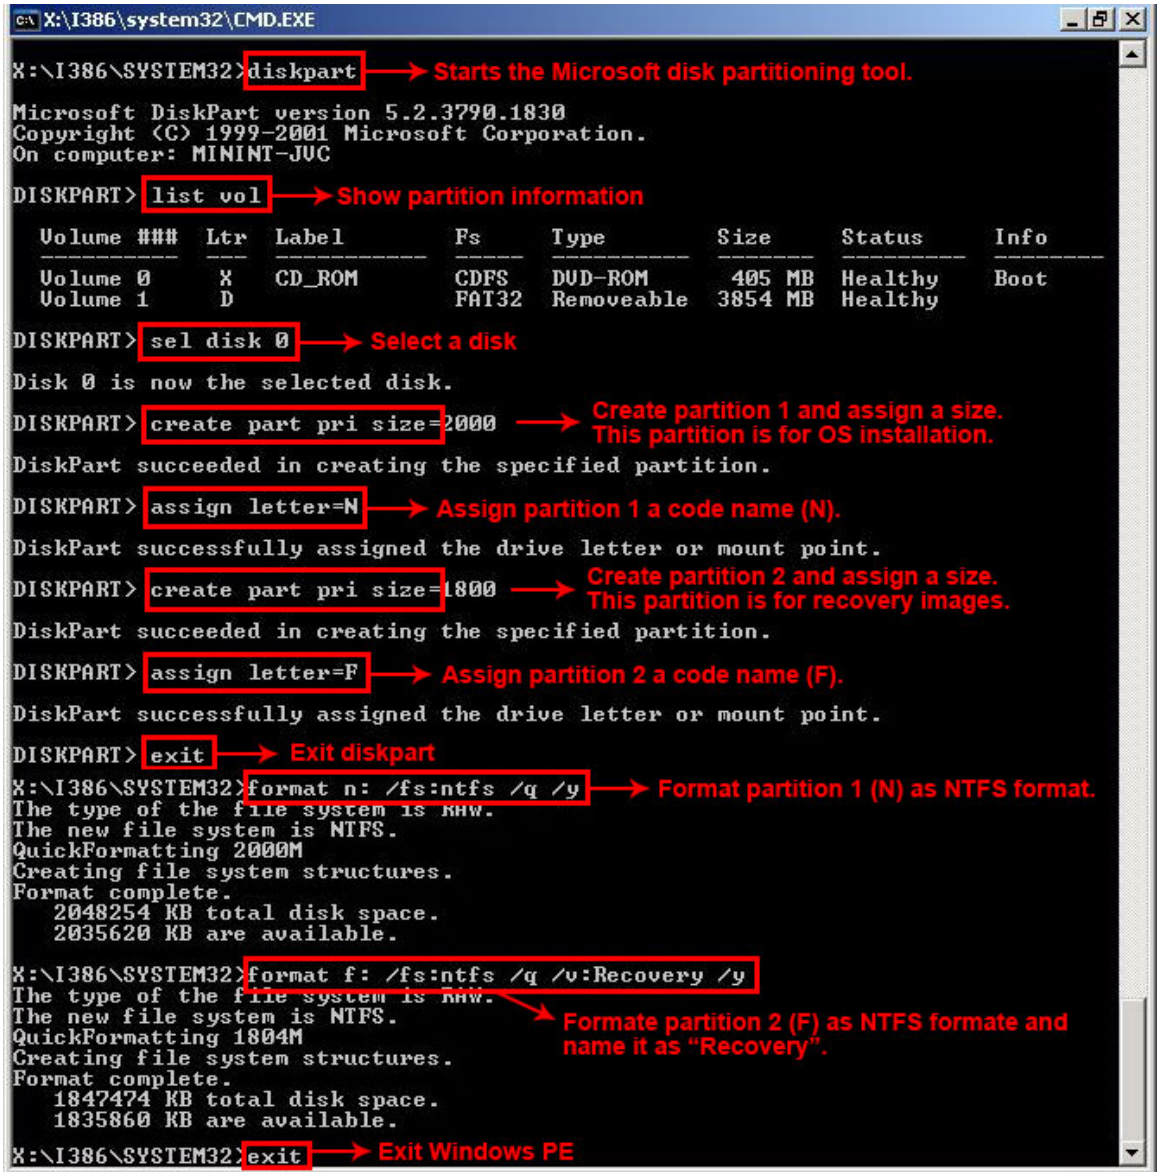
X:\I386\system32\CMD.EXE
X:\I386\SYSTEM32>diskpart
Starts the Microsoft disk partitioning tool.
Microsoft DiskPart version 5.2.3790.1830
Copyright (C) 1999-2001 Microsoft Corporation.
On computer: MININT-JVC
DISKPART> list vol
Show partition information
Volume ### Ltr Label Fs Type Size Status Info
Volume 0 X CD_ROM CDFS DVD-ROM 405 MB Healthy Boot
Volume 1 D FAT32 Removeable 3854 MB Healthy
DISKPART> sel disk 0
Select a disk
Disk 0 is now the selected disk.
DISKPART> create part pri size=2000
Create partition 1 and assign a size.
This partition is for OS installation.
DiskPart succeeded in creating the specified partition.
DISKPART> assign letter=N
Assign partition 1 a code name (N).
DiskPart successfully assigned the drive letter or mount point.
DISKPART> create part pri size=1800
Create partition 2 and assign a size.
This partition is for recovery images.
DiskPart succeeded in creating the specified partition.
DISKPART> assign letter=F
Assign partition 2 a code name (F).
DiskPart successfully assigned the drive letter or mount point.
DISKPART> exit
Exit diskpart
X:\I386\SYSTEM32>format n: /fs:ntfs /q /y
Format partition 1 (N) as NTFS format.
The type of the file system is RAW.
The new file system is NTFS.
QuickFormatting 2000M
Creating file system structures.
Format complete.
2048254 KB total disk space.
2035620 KB are available.
X:\I386\SYSTEM32>format f: /fs:ntfs /q /v:Recovery /y
The type of the file system is RAW.
The new file system is NTFS.
QuickFormatting 1804M
Creating file system structures.
Format complete.
1847474 KB total disk space.
1835860 KB are available.
Formate partition 2 (F) as NTFS formate and
name it as "Recovery".
X:\I386\SYSTEM32>exit
Exit Windows PE

Figure B-5: Partition Creation Commands

NOTE:

Use the following commands to check if the partitions were created successfully.

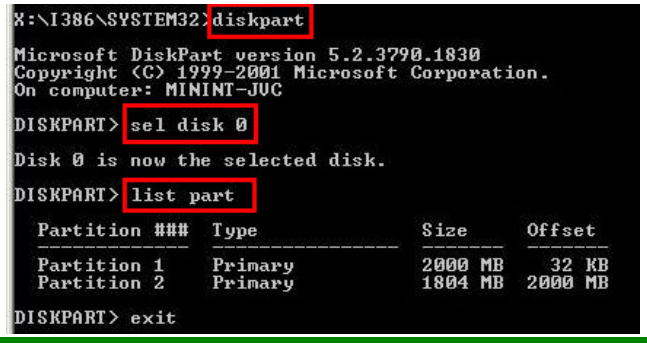
X:\I386\SYSTEM32>diskpart
Microsoft DiskPart version 5.2.3790.1830
Copyright (C) 1999-2001 Microsoft Corporation.
On computer: MININT-JVC
DISKPART> sel disk 0
Disk 0 is now the selected disk.
DISKPART> list part
Partition ### Type Size Offset
Partition 1 Primary 2000 MB 32 KB
Partition 2 Primary 1804 MB 2000 MB
DISKPART> exit

Step 6: Press any key to exit the recovery tool and automatically reboot the system.

Please continue to the following procedure: Build-up Recovery Partition.

B.2.3 Install Operating System, Drivers and Applications

Install the operating system onto the unlabelled partition. The partition labeled as "Recovery" is for use by the system recovery tool and should not be used for installing the operating system or any applications.

NOTE:

The operating system installation program may offer to reformat the chosen partition. DO NOT format the partition again. The partition has already been formatted and is ready for installing the new operating system.

To install the operating system, insert the operating system installation CD into the optical drive. Restart the computer and follow the installation instructions.

B.2.4 Build-up Recovery Partition

Step 1: Put the recover CD in the optical drive.

Step 2: Start the system.

Step 3: **Boot the system from recovery CD**. When prompted, press any key to boot from the recovery CD. It will take a while to launch the recovery tool. Please be patient!

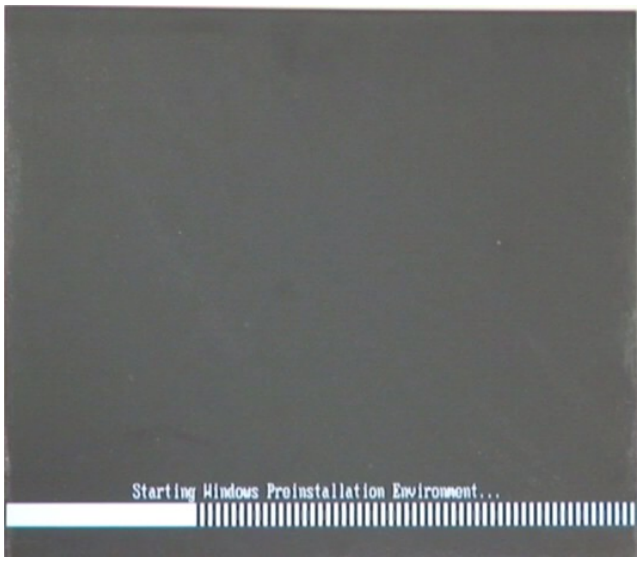

Figure B-6: Launching the Recovery Tool

Step 4: When the recovery tool setup menu appears, press <**2**> then <Enter>.

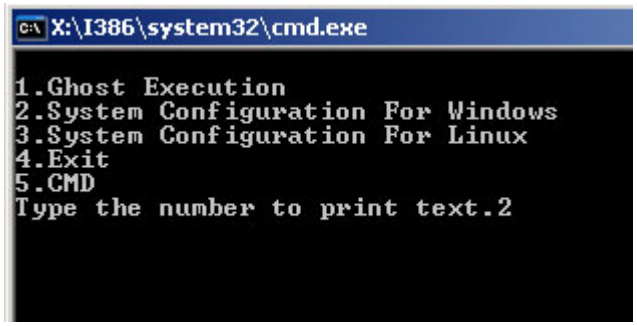

Figure B-7: System Configuration for Windows

Step 5: The Symantec Ghost window appears and starts configuring the system to build-up a recovery partition. In this process, the partition which is created for

recovery files in **Section B.2.2** is hidden and the recovery tool is saved in this partition.

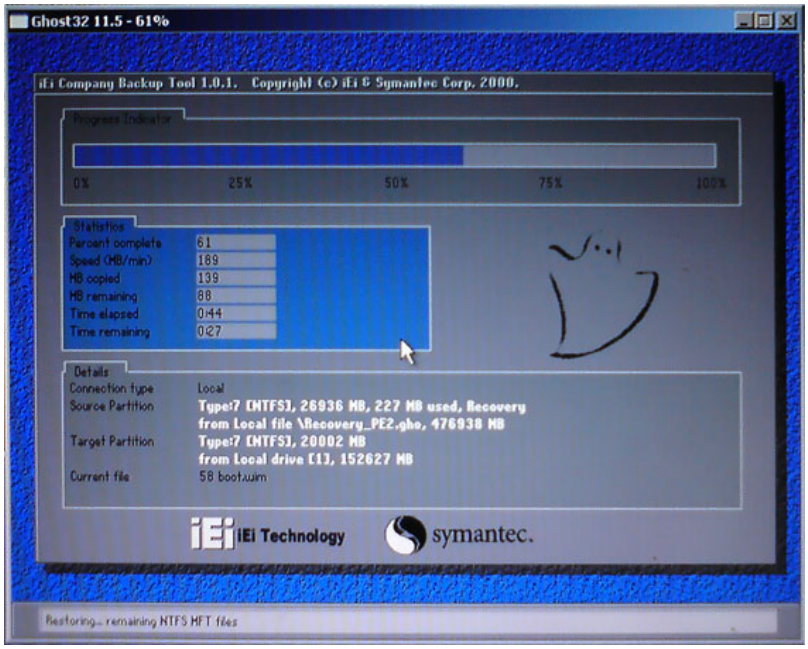

Figure B-8: Build-up Recovery Partition

Step 6: After completing the system configuration, press any key in the following window to reboot the system.

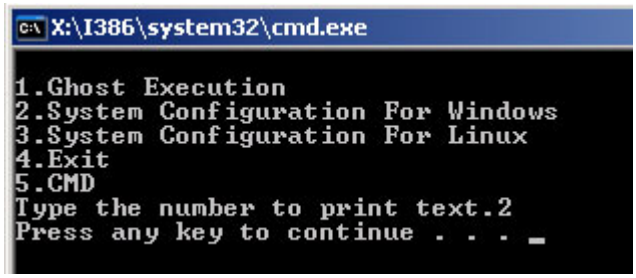

Figure B-9: Press any key to continue

Step 7: Eject the recovery CD.

B.2.5 Create Factory Default Image

NOTE:

Before creating the factory default image, please configure the system to a factory default environment, including driver and application installations.

To create a factory default image, please follow the steps below.

Step 1: Turn on the system. When the following screen displays (**Figure B-10**), press the <**F3**> key to access the recovery tool. The message will display for 10 seconds, please press F3 before the system boots into the operating system.

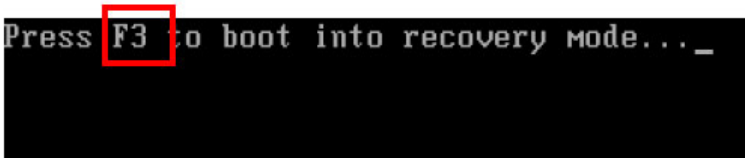

Figure B-10: Press F3 to Boot into Recovery Mode

Step 2: The recovery tool menu appears. Type <**4**> and press <**Enter**>. (**Figure B-11**)

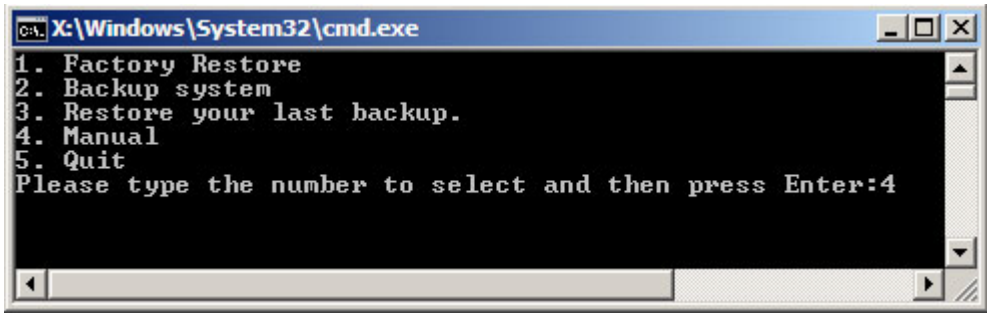

Figure B-11: Recovery Tool Menu

Step 3: The About Symantec Ghost window appears. Click **OK** button to continue.

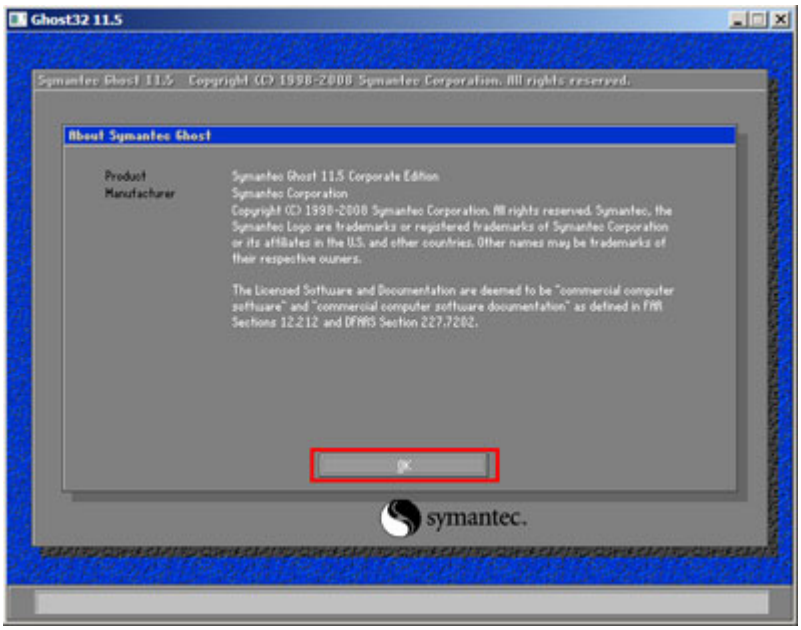

Figure B-12: About Symantec Ghost Window

Step 4: Use mouse to navigate to the option shown below (**Figure B-13**).

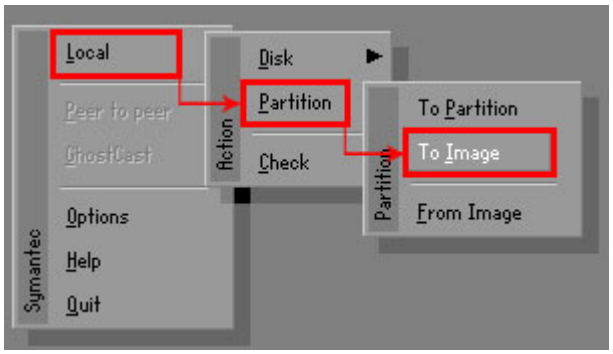

Figure B-13: Symantec Ghost Path

Step 5: Select the local source drive (Drive 1) as shown in **Figure B-14**. Then click OK.

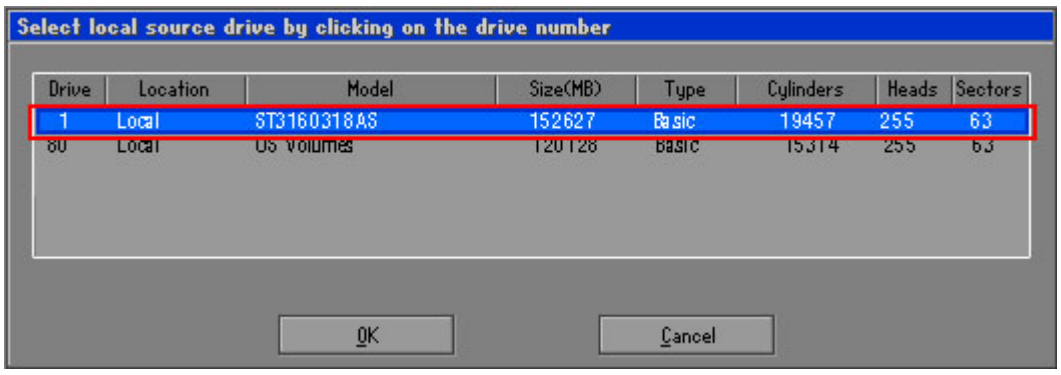

Figure B-14: Select a Local Source Drive

Step 6: Select a source partition (Part 1) from basic drive as shown in **Figure B-15**. Then click OK.

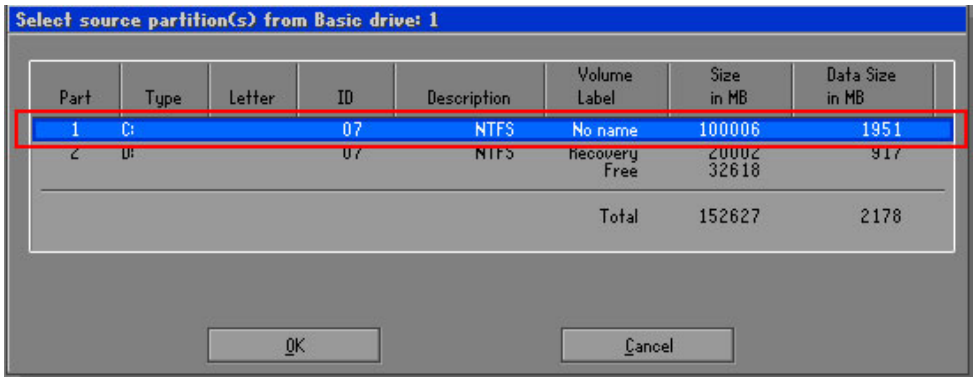

Figure B-15: Select a Source Partition from Basic Drive

Step 7: Select **1.2: [Recovery] NTFS drive** and enter a file name called **iei** (**Figure B-16**). Click **Save**. The factory default image will then be saved in the selected recovery drive and named IEI.GHO.

WARNING:

The file name of the factory default image must be **iei.GHO**.

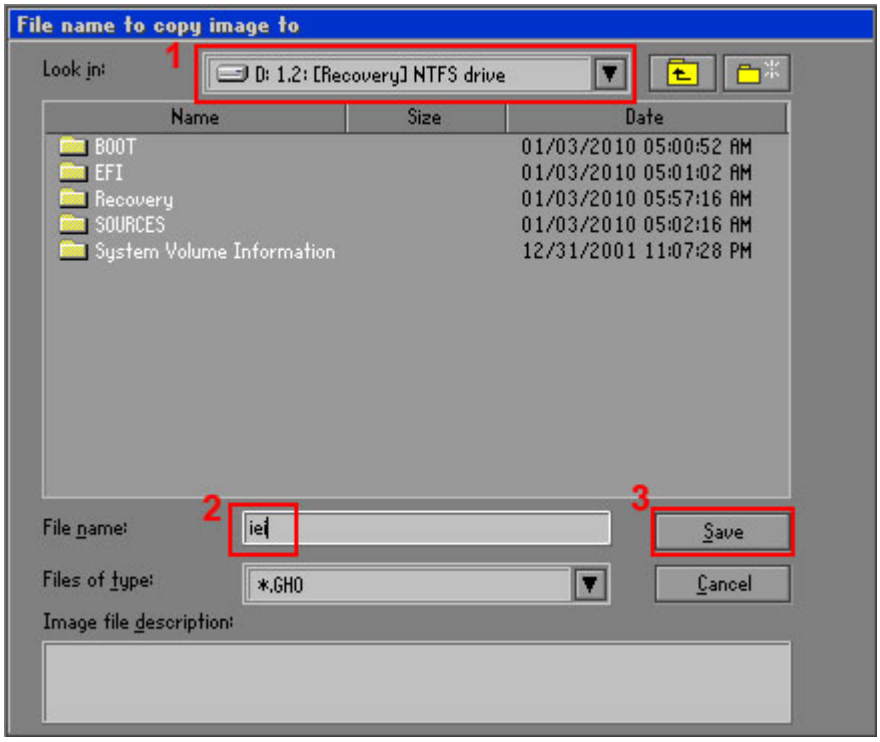

Figure B-16: File Name to Copy Image to

Step 8: When the Compress Image screen appears, click **High** to make the image file smaller. See **Figure B-17**.

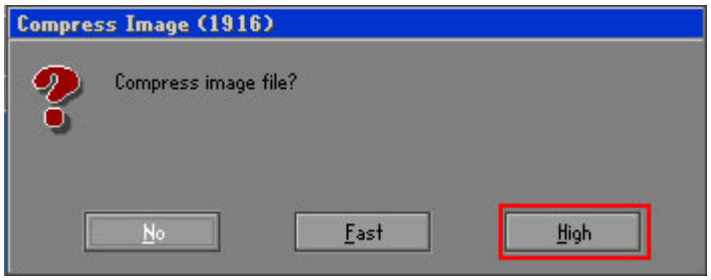

Figure B-17: Compress Image

Step 9: The Proceed with partition image creation window appears, click **Yes** to continue.

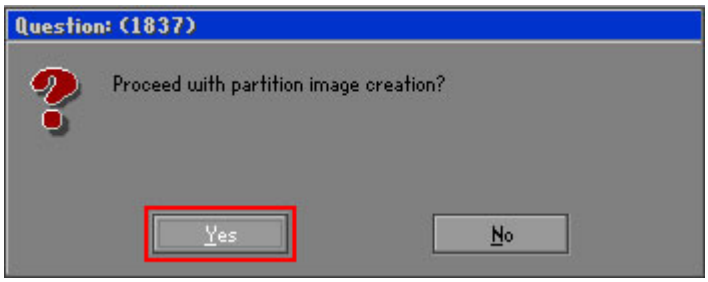

Figure B-18: Image Creation Confirmation

Step 10: The Symantec Ghost starts to create the factory default image (**Figure B-19**).

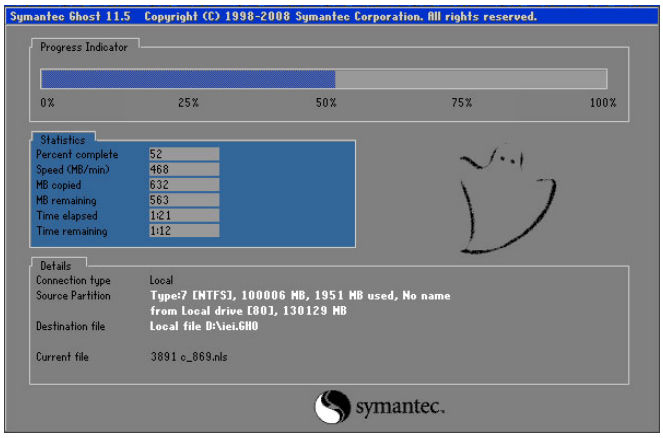

Figure B-19: Image Creation Process

Step 11: When the image creation completes, a screen prompts as shown in **Figure B-20**. Click **Continue** and close the Ghost window to exit the program.

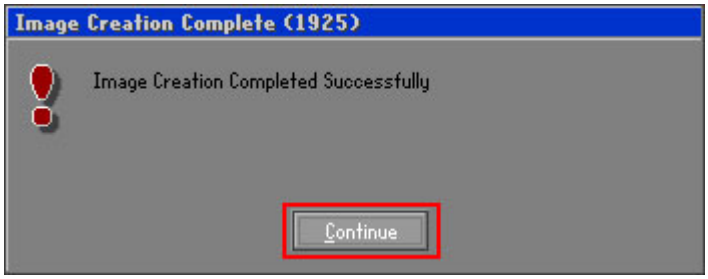

Figure B-20: Image Creation Complete

Step 12: The recovery tool main menu window is shown as below. Press any key to reboot the system.

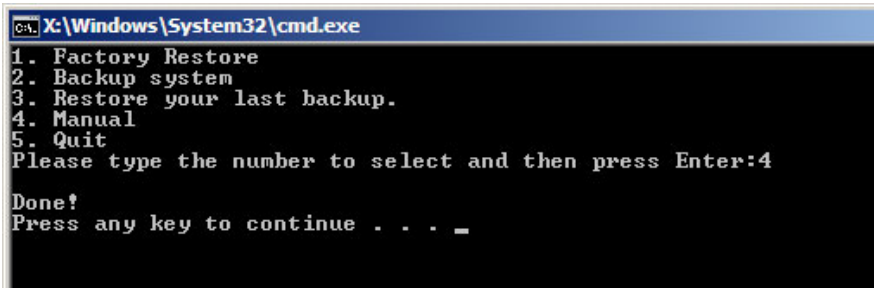

Figure B-21: Press Any Key to Continue

B.3 Setup Procedure for Linux

The initial setup procedures for Linux system are mostly the same with the procedure for Microsoft Windows. Please follow the steps below to setup recovery tool for Linux OS.

Step 1: **Hardware and BIOS setup**. Refer to **Section B.2.1**.

Step 2: **Install Linux operating system**. Make sure to install GRUB (v0.97 or earlier) MBR type and Ext3 partition type. Leave enough space on the hard drive to create the recover partition later.

NOTE:

If the Linux OS is not installed with GRUB (v0.97 or earlier) and Ext3, the Symantec Ghost may not function properly.

While installing Linux OS, please create two partitions:

- Partition 1: ***/***
- Partition 2: **SWAP**

NOTE:

Please reserve enough space for partition 3 for saving recovery images.

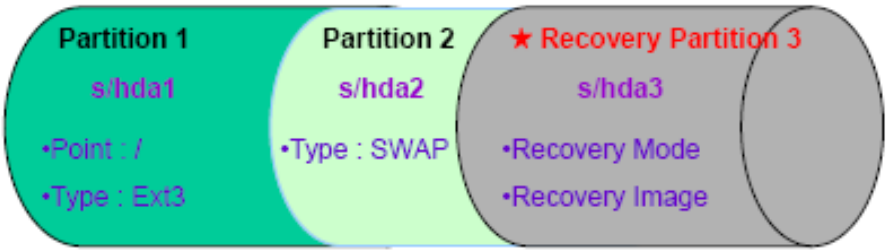

Figure B-22: Partitions for Linux

Step 3: **Create a recovery partition**. Insert the recovery CD into the optical disk drive. Follow **Step 1** ~ **Step 3** described in **Section B.2.2**. Then type the following commands (marked in red) to create a partition for recovery images.

system32>diskpart

DISKPART>list vol

DISKPART>sel disk 0

DISKPART>create part pri size= ___

DISKPART>assign letter=N

DISKPART>exit

system32>format N: /fs:ntfs /q /v:Recovery /y

system32>exit

Step 4: **Build-up recovery partition**. Press any key to boot from the recovery CD. It will take a while to launch the recovery tool. Please be patient. When the recovery tool setup menu appears, type <**3**> and press <Enter> (**Figure B-23**). The Symantec Ghost window appears and starts configuring the system to build-up a recovery partition. After completing the system configuration, press any key to reboot the system. Eject the recovery CD.

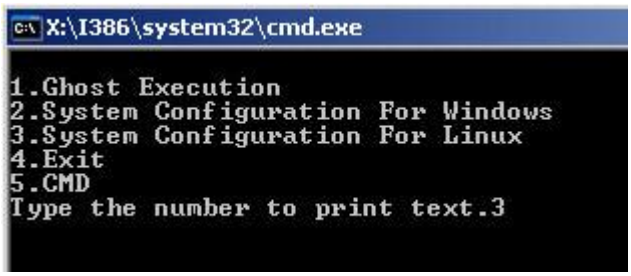

Figure B-23: System Configuration for Linux

Step 5: **Access the recovery tool main menu by modifying the "menu.lst"**. To first access the recovery tool main menu, the menu.lst must be modified. In Linux system, enter Administrator (root). When prompt appears, type:

cd /boot/grub

vi menu.lst

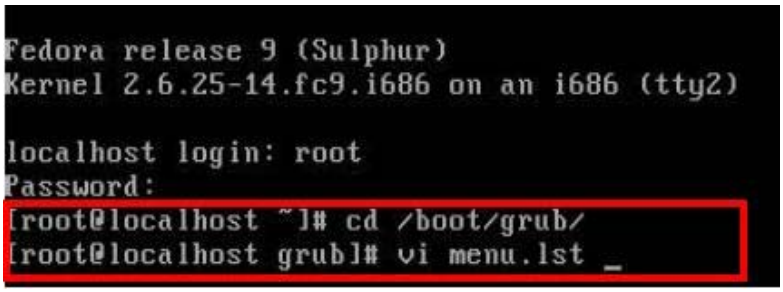

Figure B-24: Access menu.lst in Linux (Text Mode)

Step 6: Modify the menu.lst as shown below.

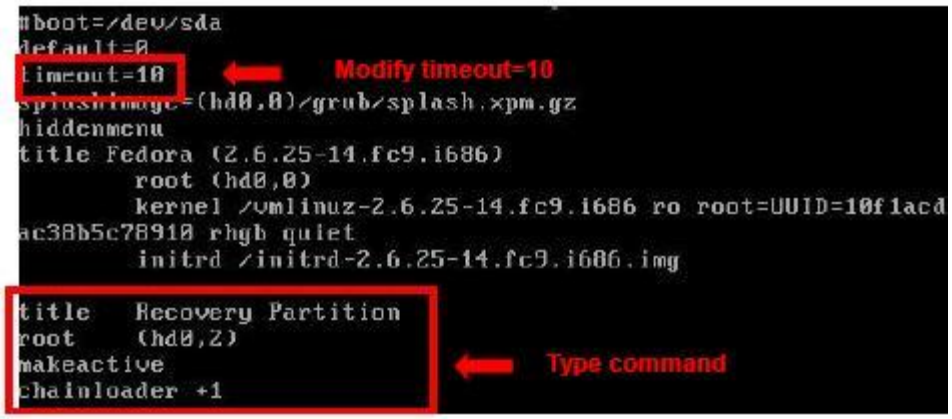

- Type command:

  title Recovery Partition

  root (hd0,2)

  makeactive

  chainloader +1

Step 7: The recovery tool menu appears. (**Figure B-25**)

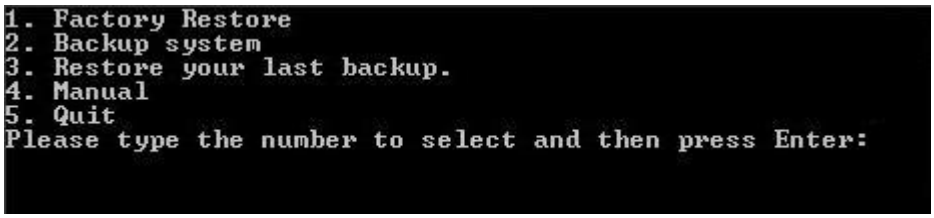
1. Factory Restore
2. Backup system
3. Restore your last backup.
4. Manual
5. Quit
Please type the number to select and then press Enter:

Figure B-25: Recovery Tool Menu

Step 8: **Create a factory default image**. Follow **Step 2** ~ **Step 12** described in **Section B.2.5** to create a factory default image.

B.4 Recovery Tool Functions

After completing the initial setup procedures as described above, users can access the recovery tool by pressing <**F3**> while booting up the system. The main menu of the recovery tool is shown below.

Figure B-26: Recovery Tool Main Menu

The recovery tool has several functions including:

6. **Factory Restore**: Restore the factory default image (iei.GHO) created in **Section B.2.5**.
7. **Backup system**: Create a system backup image (iei_user.GHO) which will be saved in the hidden partition.
8. **Restore your last backup**: Restore the last system backup image
9. **Manual**: Enter the Symantec Ghost window to configure manually.
10. **Quit**: Exit the recovery tool and restart the system.

WARNING:

Please do not turn off the system power during the process of system recovery or backup.

WARNING:

All data in the system will be deleted during the system recovery. Please backup the system files before restoring the system (either Factory Restore or Restore Backup).

B.4.1 Factory Restore

To restore the factory default image, please follow the steps below.

Step 1: Type <**1**> and press <**Enter**> in the main menu.

Step 2: The Symantec Ghost window appears and starts to restore the factory default. A factory default image called **iei.GHO** is created in the hidden Recovery partition.

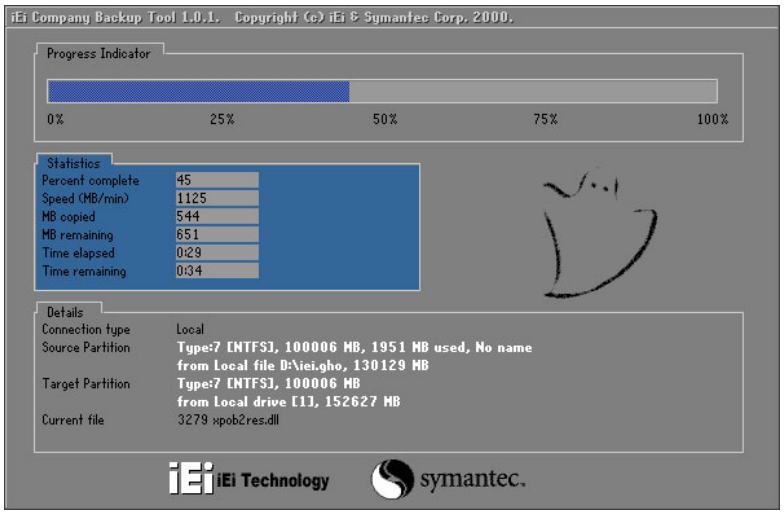

Figure B-27: Restore Factory Default

Step 3: The screen is shown as in **Figure B-28** when completed. Press any key to reboot the system.

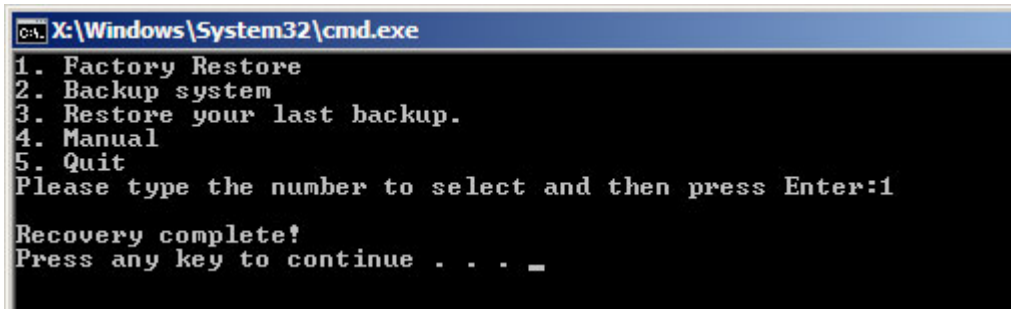
X:\Windows\System32\cmd.exe
1. Factory Restore
2. Backup system
3. Restore your last backup.
4. Manual
5. Quit
Please type the number to select and then press Enter:1
Recovery complete!
Press any key to continue . . .

Figure B-28: Recovery Complete Window

B.4.2 Backup System

To backup the system, please follow the steps below.

Step 1: Type <**2**> and press <**Enter**> in the main menu.

Step 2: The Symantec Ghost window appears and starts to backup the system. A backup image called **iei_user.GHO** is created in the hidden Recovery partition.

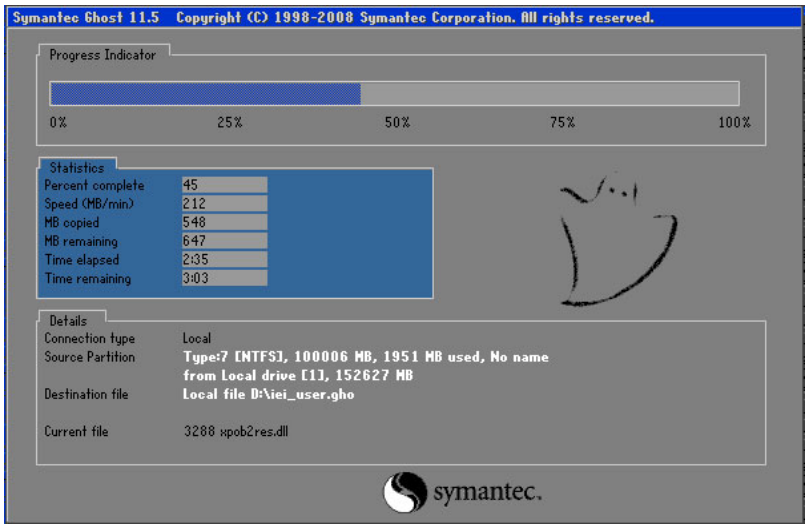

Figure B-29: Backup System

Step 3: The screen is shown as in **Figure B-30** when system backup is completed. Press any key to reboot the system.

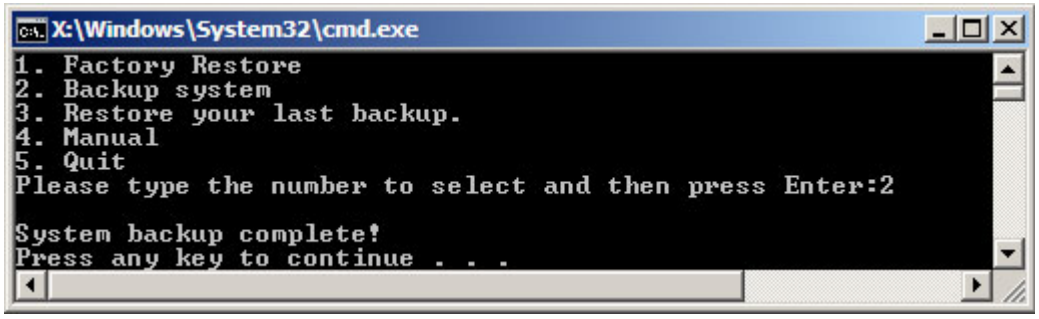
X:\Windows\System32\cmd.exe
1. Factory Restore
2. Backup system
3. Restore your last backup.
4. Manual
5. Quit
Please type the number to select and then press Enter:2
System backup complete!
Press any key to continue . . .

Figure B-30: System Backup Complete Window

B.4.3 Restore Your Last Backup

To restore the last system backup, please follow the steps below.

Step 1: Type <**3**> and press <**Enter**> in the main menu.

Step 2: The Symantec Ghost window appears and starts to restore the last backup image (iei_user.GHO).

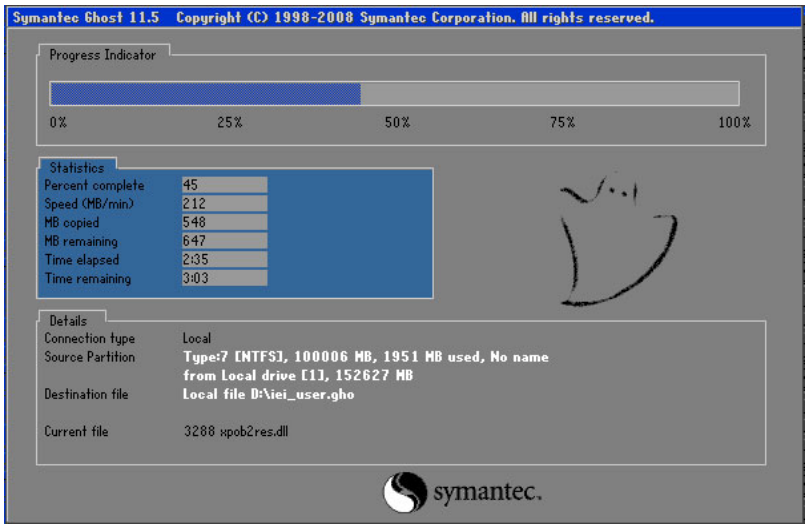

Figure B-31: Restore Backup

Step 3: The screen is shown as in **Figure B-32** when backup recovery is completed. Press any key to reboot the system.

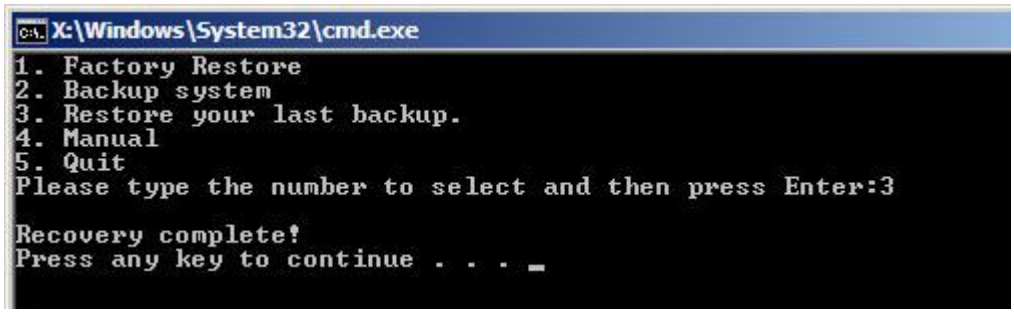
X:\Windows\System32\cmd.exe
1. Factory Restore
2. Backup system
3. Restore your last backup.
4. Manual
5. Quit
Please type the number to select and then press Enter:3
Recovery complete!
Press any key to continue . . .

Figure B-32: Restore System Backup Complete Window

B.4.4 Manual

To restore the last system backup, please follow the steps below.

Step 1: Type <**4**> and press <**Enter**> in the main menu.

Step 2: The Symantec Ghost window appears. Use the Ghost program to backup or recover the system manually.

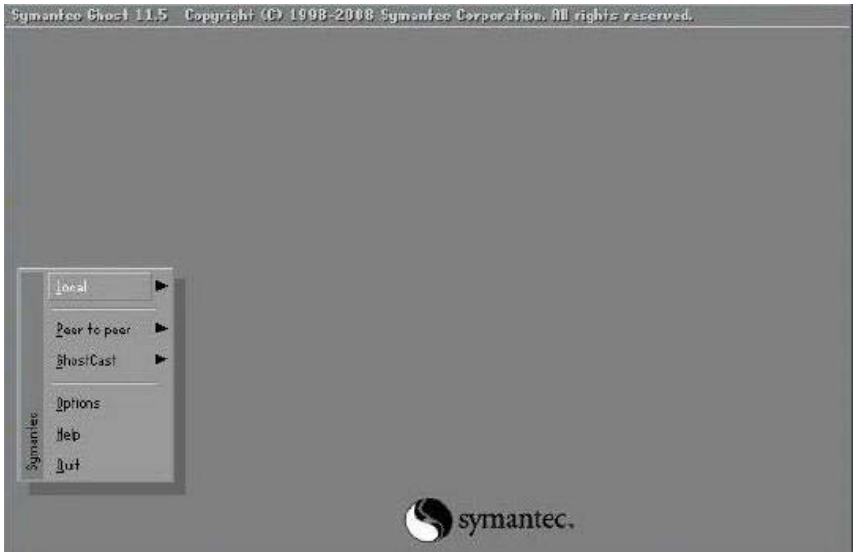

Figure B-33: Symantec Ghost Window

Step 3: When backup or recovery is completed, press any key to reboot the system.

B.5 Other Information

B.5.1 Using AHCI Mode or ALi M5283 / VIA VT6421A Controller

When the system uses AHCI mode or some specific SATA controllers such as ALi M5283 or VIA VT6421A, the SATA RAID/AHCI driver must be installed before using one key recovery. Please follow the steps below to install the SATA RAID/AHCI driver.

Step 1: Copy the SATA RAID/AHCI driver to a floppy disk and insert the floppy disk into a USB floppy disk drive. The SATA RAID/AHCI driver must be especially designed for the on-board SATA controller.

Step 2: Connect the USB floppy disk drive to the system.

Step 3: Insert the One Key Recovery CD into the system and boot the system from the CD.

Step 4: When launching the recovery tool, press <**F6**>.

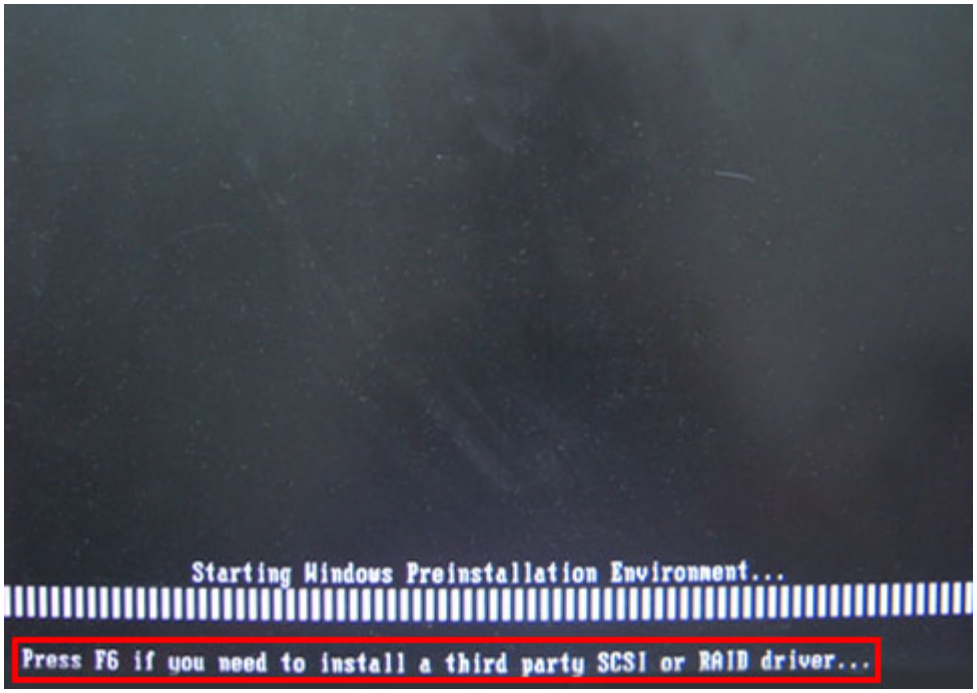

Step 5: When the following window appears, press <**S**> to select “Specify Additional Device”.

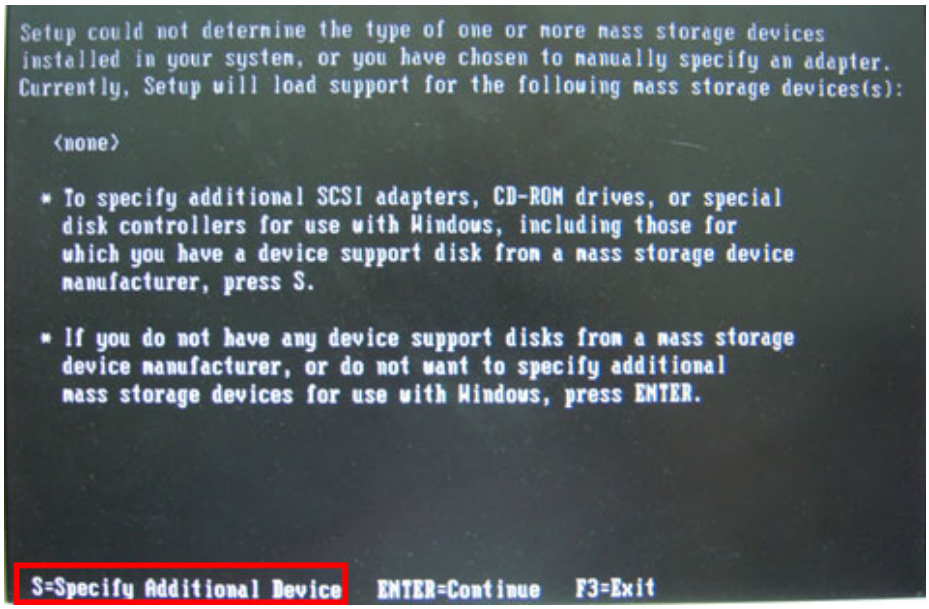
Setup could not determine the type of one or more mass storage devices installed in your system, or you have chosen to manually specify an adapter. Currently, Setup will load support for the following mass storage devices(s):
<none>
* To specify additional SCSI adapters, CD-ROM drives, or special disk controllers for use with Windows, including those for which you have a device support disk from a mass storage device manufacturer, press S.
* If you do not have any device support disks from a mass storage device manufacturer, or do not want to specify additional mass storage devices for use with Windows, press ENTER.
S=Specify Additional Device
ENTER=Continue
F3=Exit

Step 6: In the following window, select a SATA controller mode used in the system. Then press <**Enter**>. The user can now start using the SATA HDD.

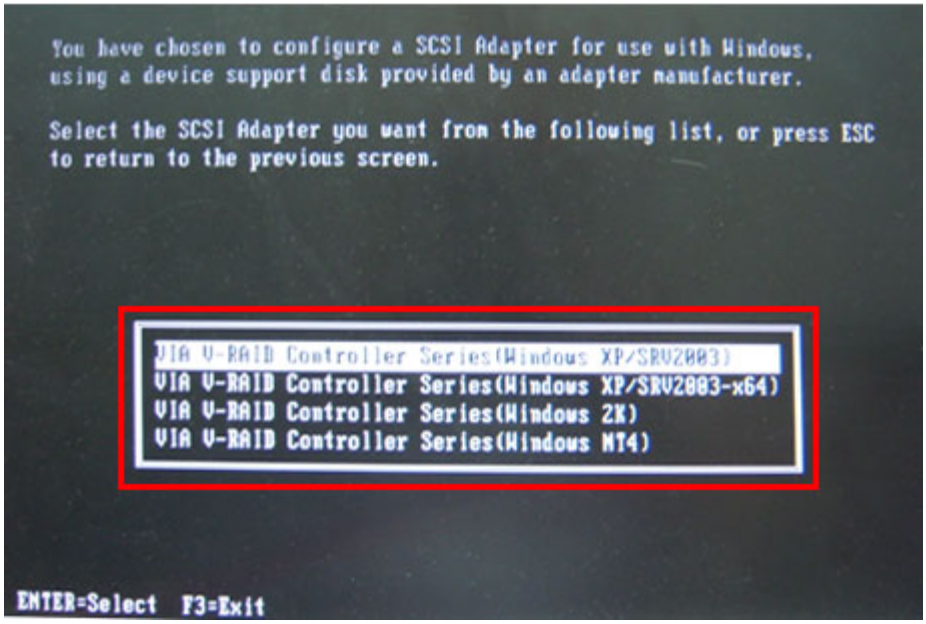
You have chosen to configure a SCSI Adapter for use with Windows, using a device support disk provided by an adapter manufacturer.
Select the SCSI Adapter you want from the following list, or press ESC to return to the previous screen.
VIA V-RAID Controller Series(Windows XP/SRV2003)
VIA V-RAID Controller Series(Windows XP/SRV2003-x64)
VIA V-RAID Controller Series(Windows 2K)
VIA V-RAID Controller Series(Windows NT4)
ENTER=Select
F3=Exit

Step 7: After pressing <Enter>, the system will get into the recovery tool setup menu. Continue to follow the setup procedure from **Step 4** in **Section B.2.2 Create Partitions** to finish the whole setup process.

B.5.2 System Memory Requirement

To be able to access the recovery tool by pressing <**F3**> while booting up the system, please make sure to have enough system memory. The minimum memory requirement is listed below.

- **Using Award BIOS**: 128 MB system memory
- **Using AMI BIOS**: 512 MB system memory.

Appendix

C

Terminology

AC '97	Audio Codec 97 (AC'97) refers to a codec standard developed by Intel® in 1997.
ACPI	Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface.
AHCI	Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface.
ATA	The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer.
ARMD	An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives.
ASKIR	Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude ("volume") of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1.
BIOS	The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user
CODEC	The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system.
CompactFlash®	CompactFlash® is a solid-state storage device. CompactFlash® devices use flash memory in a standard size enclosure. Type II is thicker than Type I, but a Type II slot can support both types.
CMOS	Complimentary metal-oxide-conductor is an integrated circuit used in chips like static RAM and microprocessors.
COM	COM refers to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male DB-9 connector.
DAC	The Digital-to-Analog Converter (DAC) converts digital signals to analog signals.
DDR	Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal.

DMA	Direct Memory Access (DMA) enables some peripheral devices to bypass the system processor and communicate directly with the system memory.
DIMM	Dual Inline Memory Modules are a type of RAM that offer a 64-bit data bus and have separate electrical contacts on each side of the module.
DIO	The digital inputs and digital outputs are general control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.
EHCI	The Enhanced Host Controller Interface (EHCI) specification is a register-level interface description for USB 2.0 Host Controllers.
EIDE	Enhanced IDE (EIDE) is a newer IDE interface standard that has data transfer rates between 4.0 MBps and 16.6 MBps.
EIST	Enhanced Intel® SpeedStep Technology (EIST) allows users to modify the power consumption levels and processor performance through application software. The application software changes the bus-to-core frequency ratio and the processor core voltage.
FSB	The Front Side Bus (FSB) is the bi-directional communication channel between the processor and the Northbridge chipset.
GbE	Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0 Gbps and complies with the IEEE 802.3-2005 standard.
GPIO	General purpose input
HDD	Hard disk drive (HDD) is a type of magnetic, non-volatile computer storage device that stores digitally encoded data.
ICH	The Input/Ouput Control Hub (ICH) is an Intel® Southbridge chipset.
IrDA	Infrared Data Association (IrDA) specify infrared data transmission protocols used to enable electronic devices to wirelessly communicate with each other.
L1 Cache	The Level 1 Cache (L1 Cache) is a small memory cache built into the system processor.
L2 Cache	The Level 2 Cache (L2 Cache) is an external processor memory cache.

LCD	Liquid crystal display (LCD) is a flat, low-power display device that consists of two polarizing plates with a liquid crystal panel in between.
LVDS	Low-voltage differential signaling (LVDS) is a dual-wire, high-speed differential electrical signaling system commonly used to connect LCD displays to a computer.
POST	The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on.
RAM	Random Access Memory (RAM) is volatile memory that loses data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives.
SATA	Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gbps and the SATA II bus has data transfer speeds of up to 3.0 Gbps.
S.M.A.R.T	Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives.
UART	Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports.
UHCI	The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers.
USB	The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12Mbps data transfer rates and USB 2.0 supports 480Mbps data transfer rates.
VGA	The Video Graphics Array (VGA) is a graphics display system developed by IBM.

Appendix

D

Hazardous Materials Disclosure

D.1 Hazardous Materials Disclosure Table for IPB Products Certified as RoHS Compliant Under 2002/95/EC Without Mercury

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the table on the next page.

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	X	O	O	O	O	X
Display	X	O	O	O	O	X
Printed Circuit Board	X	O	O	O	O	X
Metal Fasteners	X	O	O	O	O	O
Cable Assembly	X	O	O	O	O	X
Fan Assembly	X	O	O	O	O	X
Power Supply Assemblies	X	O	O	O	O	X
Battery	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有"环境友好使用期限"的标签，此期限是估算这些物质"不会有泄漏或突变"的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	X	O	O	O	O	X
显示	X	O	O	O	O	X
印刷电路板	X	O	O	O	O	X
金属螺帽	X	O	O	O	O	O
电缆组装	X	O	O	O	O	X
风扇组装	X	O	O	O	O	X
电力供应组装	X	O	O	O	O	X
电池	O	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。